
1968 AMC JAVELIN & AMX

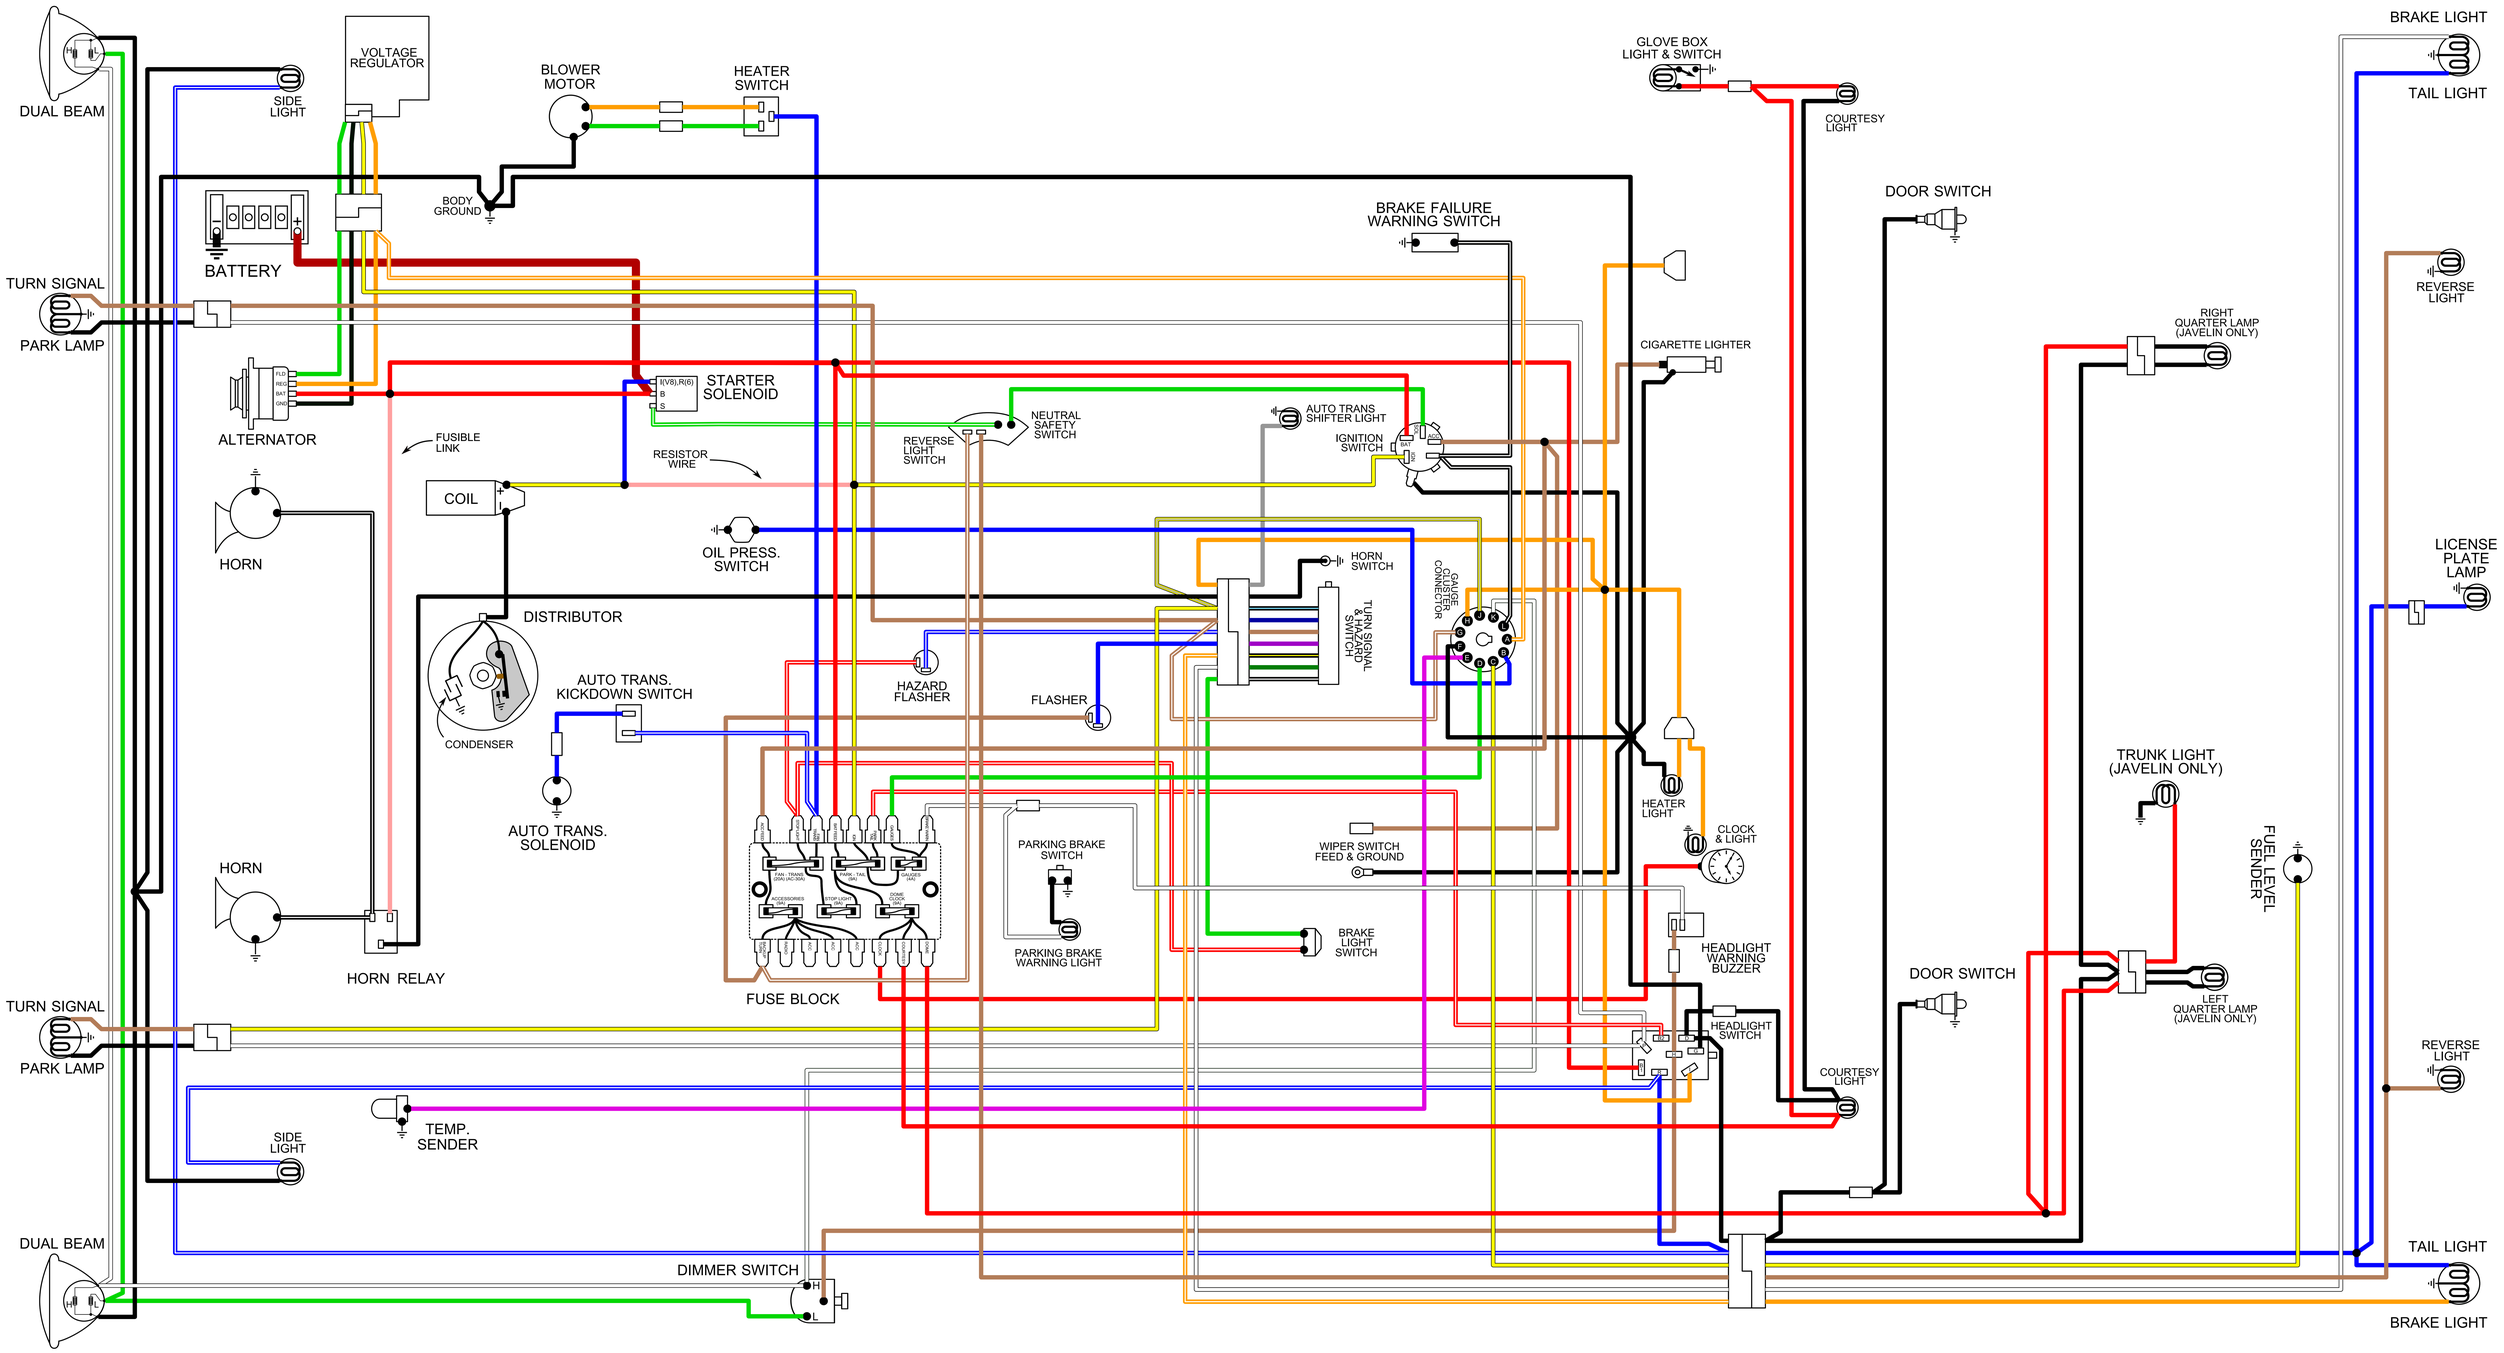

CINCO

1968 AMC JAVELIN & AMX
MAIN POWER


DUAL BEAM
SIDE LIGHT
VOLTAGE REGULATOR
BLOWER MOTOR
HEATER SWITCH
BODY GROUND
BATTERY
TURN SIGNAL
PARK LAMP
ALTERNATOR
FLD
REG
BAT
GND
I(V8),R(6)
B
S
STARTER SOLENOID
FUSIBLE LINK
COIL
HORN
OIL PRESS. SWITCH
REVERSE LIGHT SWITCH
NEUTRAL SAFETY SWITCH
AUTO TRANS SHIFTER LIGHT
IGNITION SWITCH
BAT
IGN
ACC
BRAKE FAILURE WARNING SWITCH
GLOVE BOX LIGHT & SWITCH
COURTESY LIGHT
CIGARETTE LIGHTER
DOOR SWITCH
BRAKE LIGHT
TAIL LIGHT
REVERSE LIGHT
RIGHT QUARTER LAMP (JAVELIN ONLY)
LICENSE PLATE LAMP
DISTRIBUTOR
CONDENSER
AUTO TRANS. KICKDOWN SWITCH
AUTO TRANS. SOLENOID
HORN SWITCH
GAUGE CLUSTER CONNECTOR
TURN SIGNAL & HAZARD SWITCH
HAZARD FLASHER
FLASHER
HEATER LIGHT
CLOCK & LIGHT
TRUNK LIGHT (JAVELIN ONLY)
FUEL LEVEL SENDER
HORN
HORN RELAY
FUSE BLOCK
PARKING BRAKE SWITCH
PARKING BRAKE WARNING LIGHT
WIPER SWITCH FEED & GROUND
BRAKE LIGHT SWITCH
HEADLIGHT WARNING BUZZER
HEADLIGHT SWITCH
DOOR SWITCH
LEFT QUARTER LAMP (JAVELIN ONLY)
COURTESY LIGHT
REVERSE LIGHT
TURN SIGNAL
PARK LAMP
SIDE LIGHT
TEMP. SENDER
DUAL BEAM
DIMMER SWITCH
TAIL LIGHT
BRAKE LIGHT

CINCO

1968 AMC JAVELIN & AMX
ACCESSORY POWER


DUAL BEAM
SIDE LIGHT
VOLTAGE REGULATOR
BLOWER MOTOR
HEATER SWITCH
GLOVE BOX LIGHT & SWITCH
COURTESY LIGHT
BRAKE LIGHT
TAIL LIGHT
BODY GROUND
BRAKE FAILURE WARNING SWITCH
DOOR SWITCH
BATTERY
TURN SIGNAL
PARK LAMP
REVERSE LIGHT
RIGHT QUARTER LAMP (JAVELIN ONLY)
ALTERNATOR
STARTER SOLENOID
CIGARETTE LIGHTER
FROM BATTERY
AUTO TRANS SHIFTER LIGHT
IGNITION SWITCH
NEUTRAL SAFETY SWITCH
REVERSE LIGHT SWITCH
LICENSE PLATE LAMP
HORN
COIL
OIL PRESS. SWITCH
HORN SWITCH
GAUGE CLUSTER CONNECTOR
TURN SIGNAL & HAZARD SWITCH
DISTRIBUTOR
AUTO TRANS. KICKDOWN SWITCH
HAZARD FLASHER
FLASHER
CONDENSER
AUTO TRANS. SOLENOID
TRUNK LIGHT (JAVELIN ONLY)
HEATER LIGHT
CLOCK & LIGHT
FUEL LEVEL SENDER
HORN
PARKING BRAKE SWITCH
WIPER SWITCH FEED & GROUND
HORN RELAY
FUSE BLOCK
PARKING BRAKE WARNING LIGHT
BRAKE LIGHT SWITCH
HEADLIGHT WARNING BUZZER
DOOR SWITCH
LEFT QUARTER LAMP (JAVELIN ONLY)
TURN SIGNAL
PARK LAMP
HEADLIGHT SWITCH
REVERSE LIGHT
COURTESY LIGHT
SIDE LIGHT
TEMP. SENDER
DUAL BEAM
DIMMER SWITCH
TAIL LIGHT
BRAKE LIGHT

1968 AMC JAVELIN & AMX
IGNITION SYSTEM

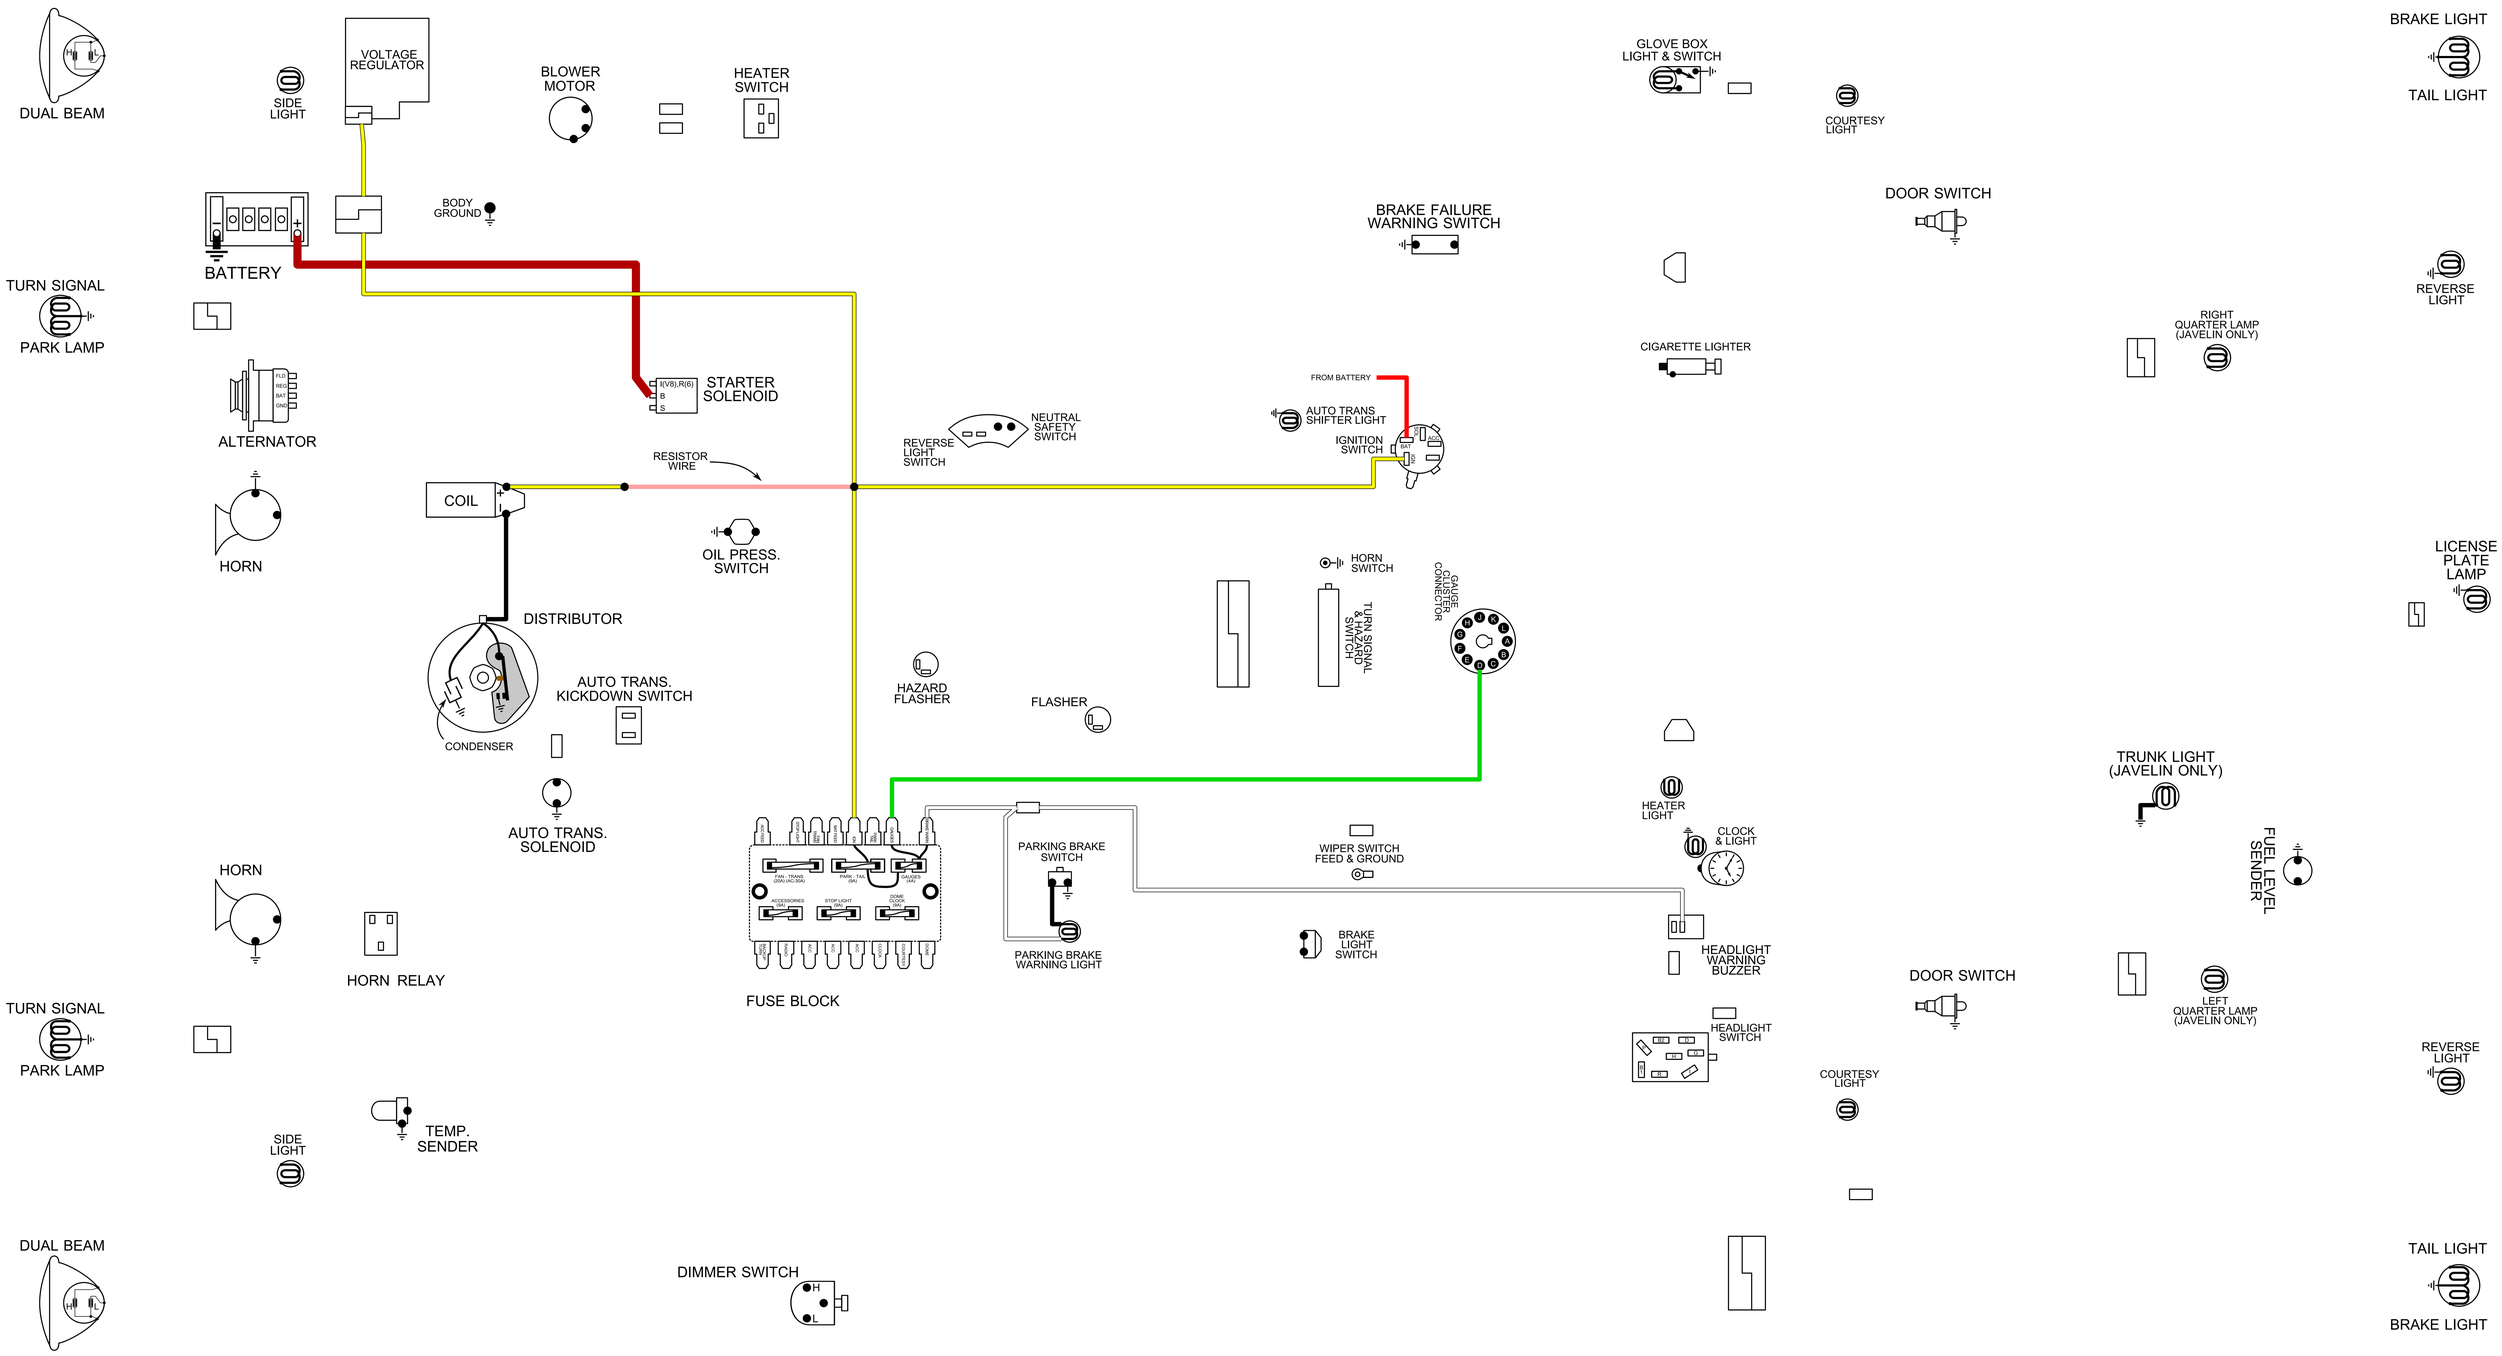


CINCO

1968 AMC JAVELIN & AMX
STARTING SYSTEM

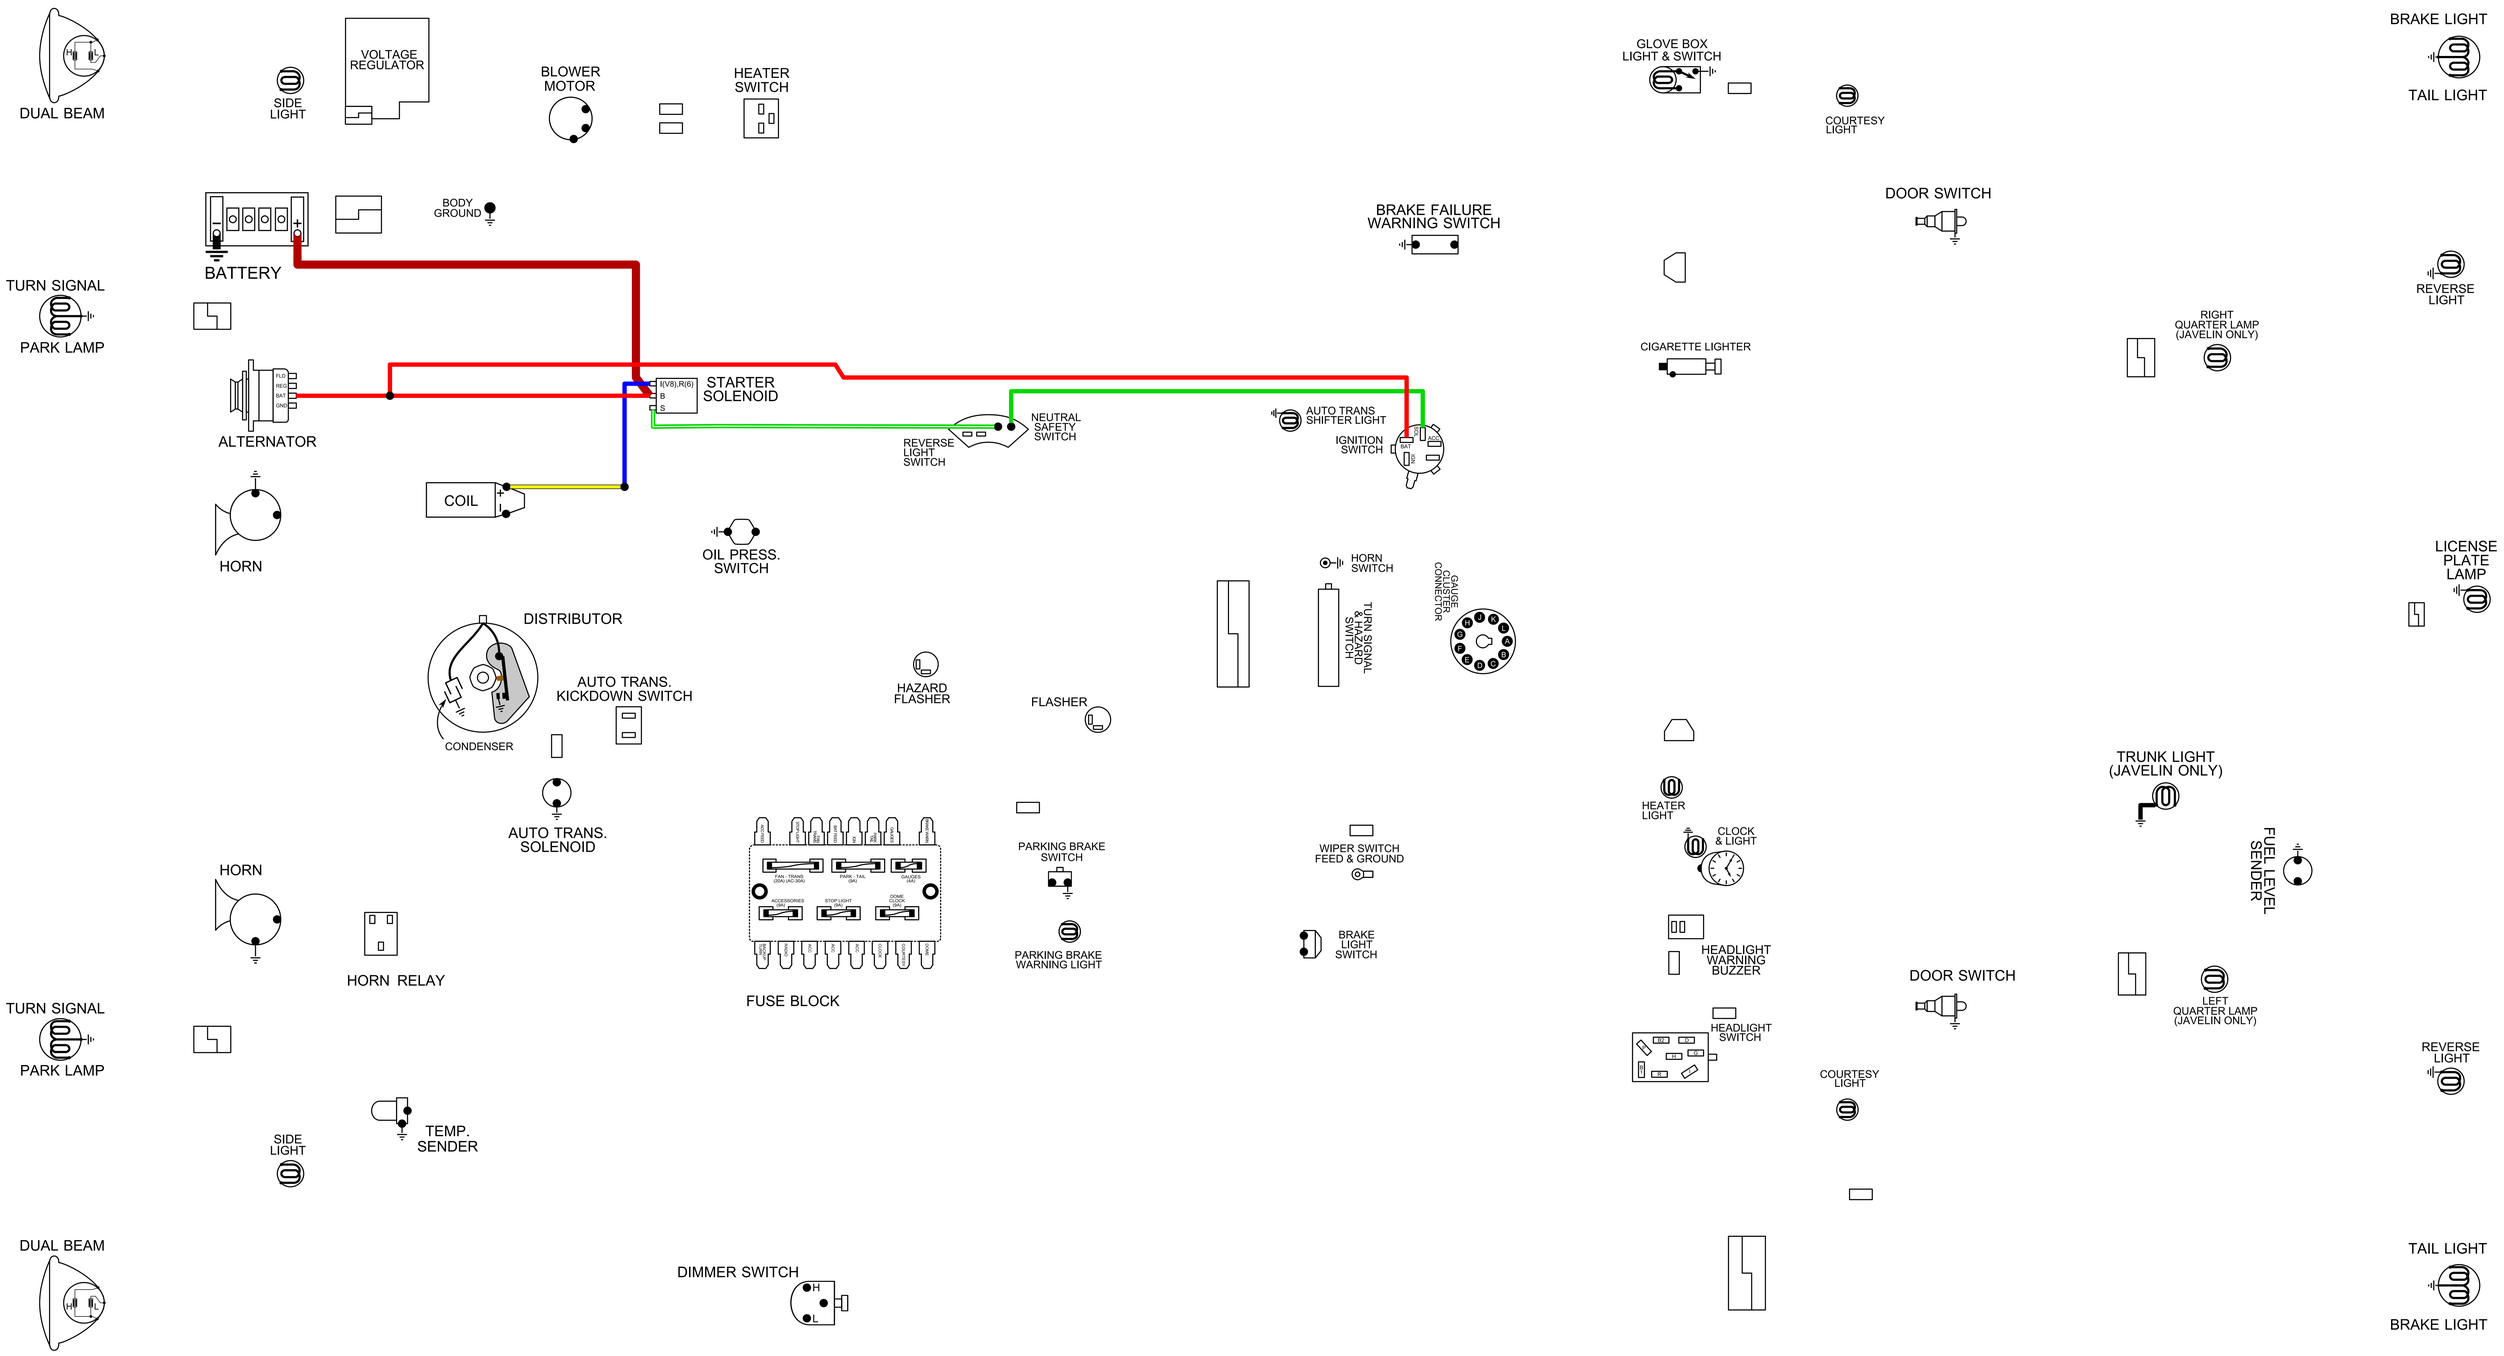


CINCO

1968 AMC JAVELIN & AMX
CHARGING SYSTEM

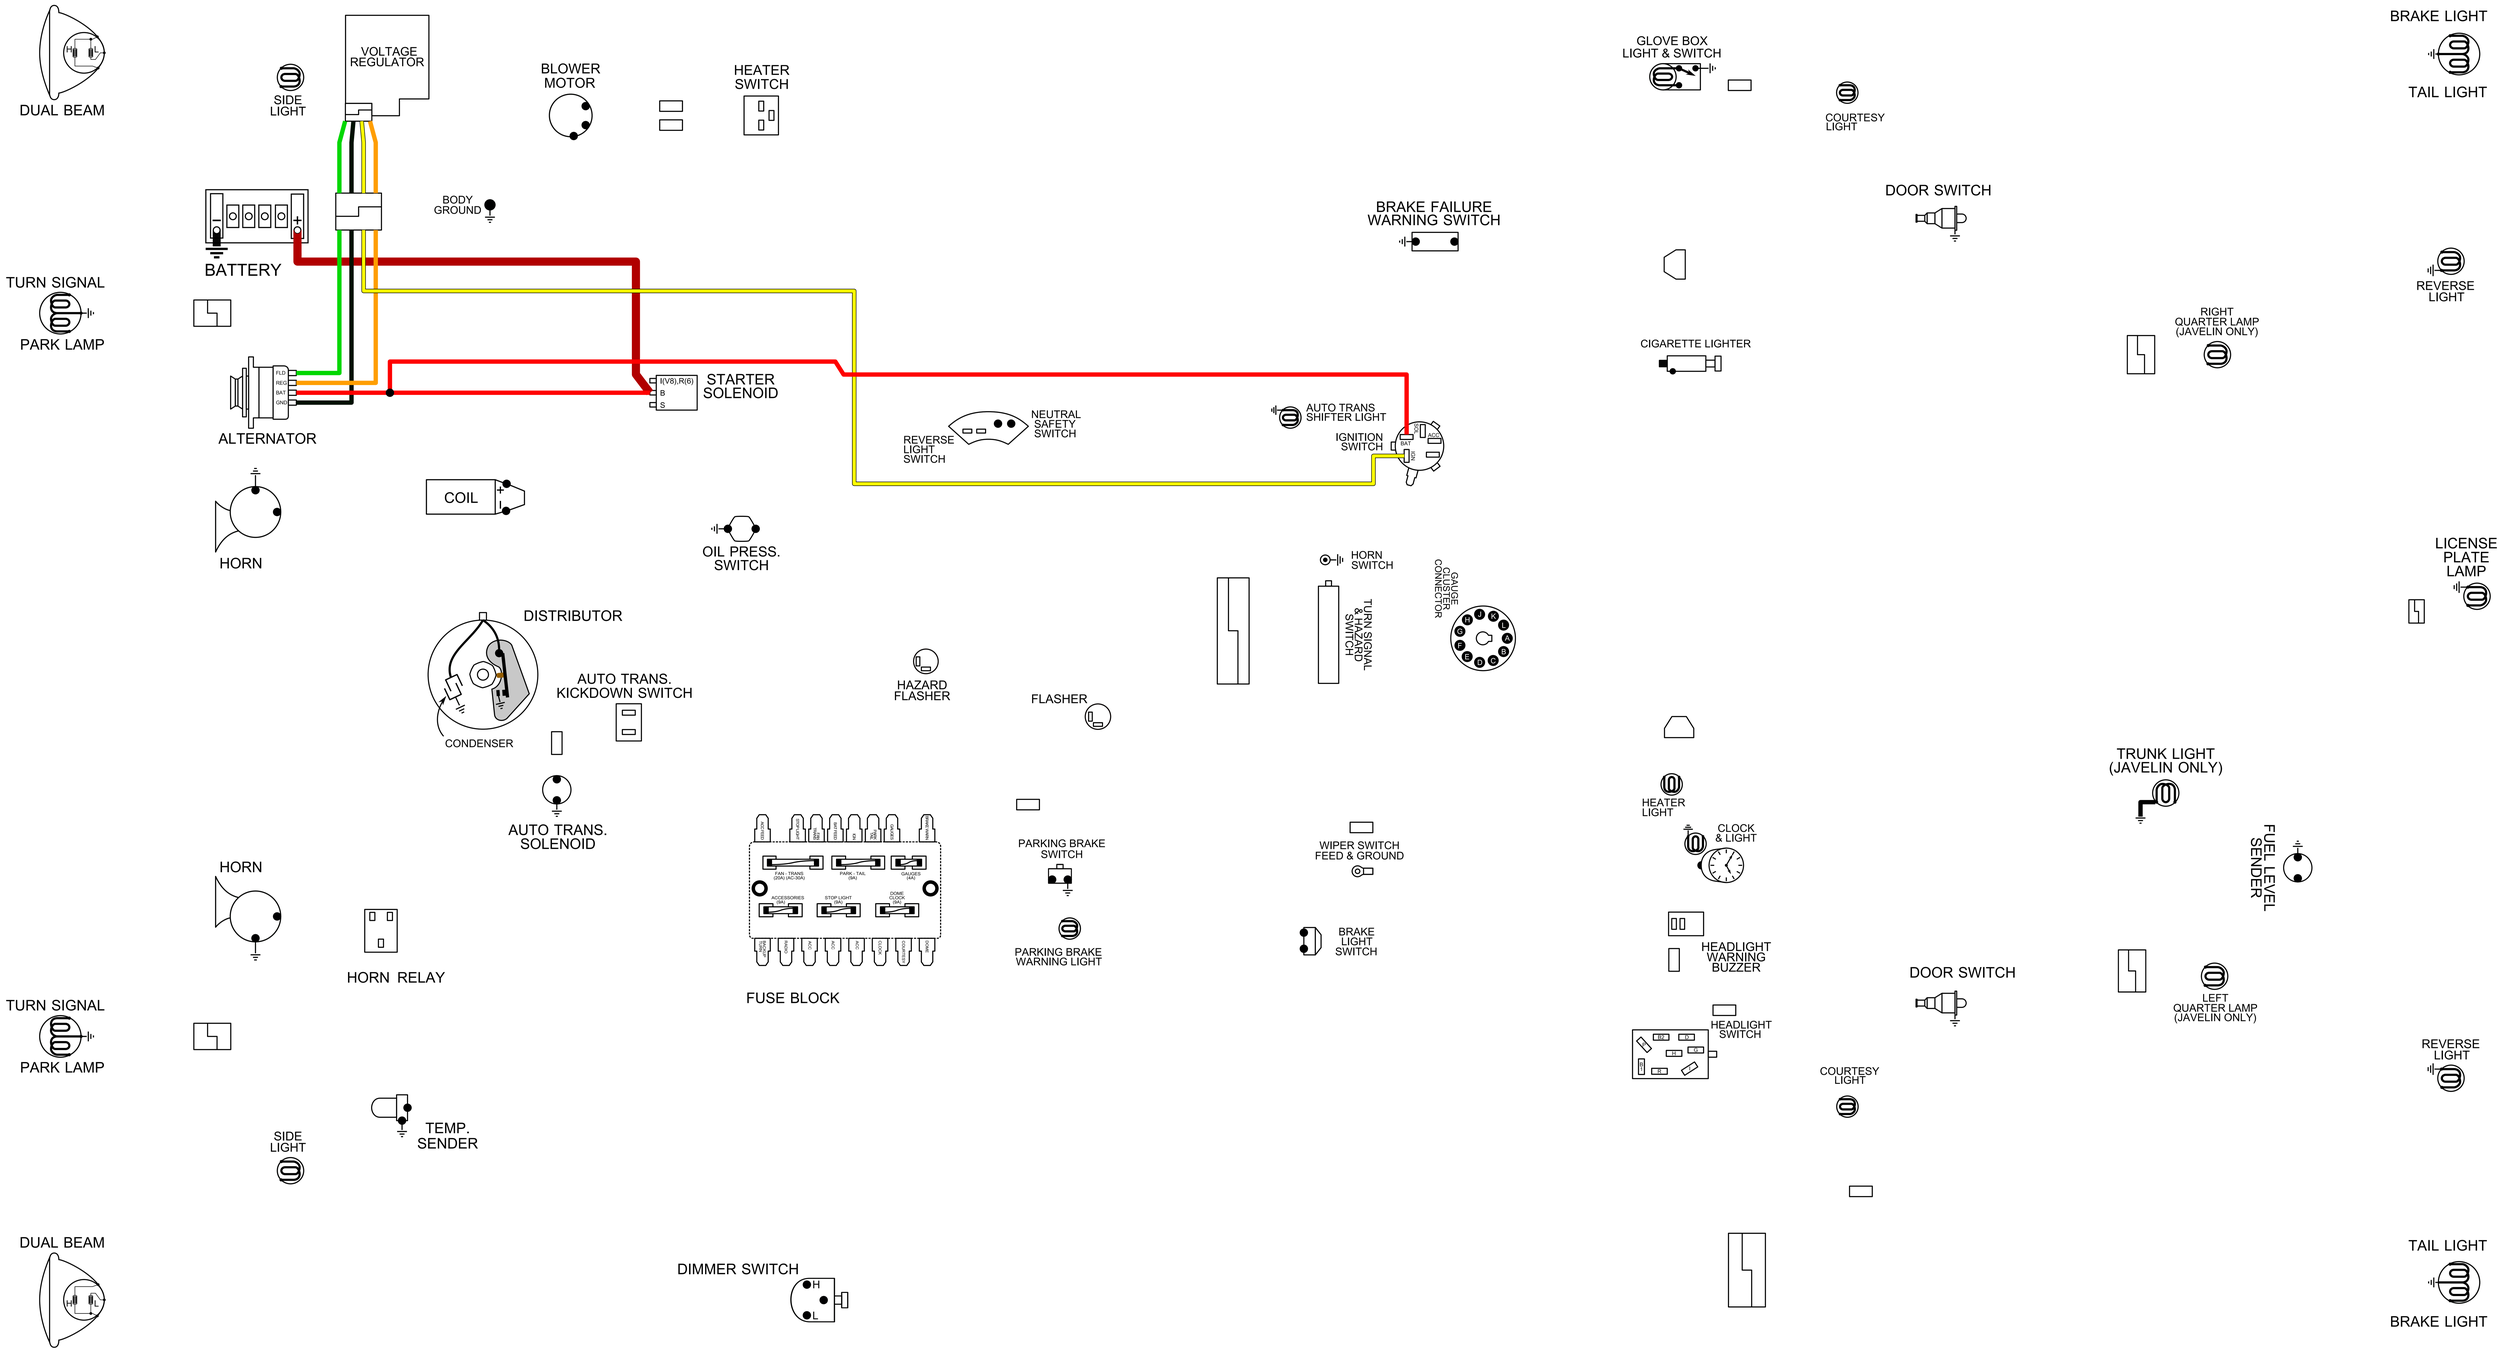


CINCO

1968 AMC JAVELIN & AMX
HEADLIGHTS

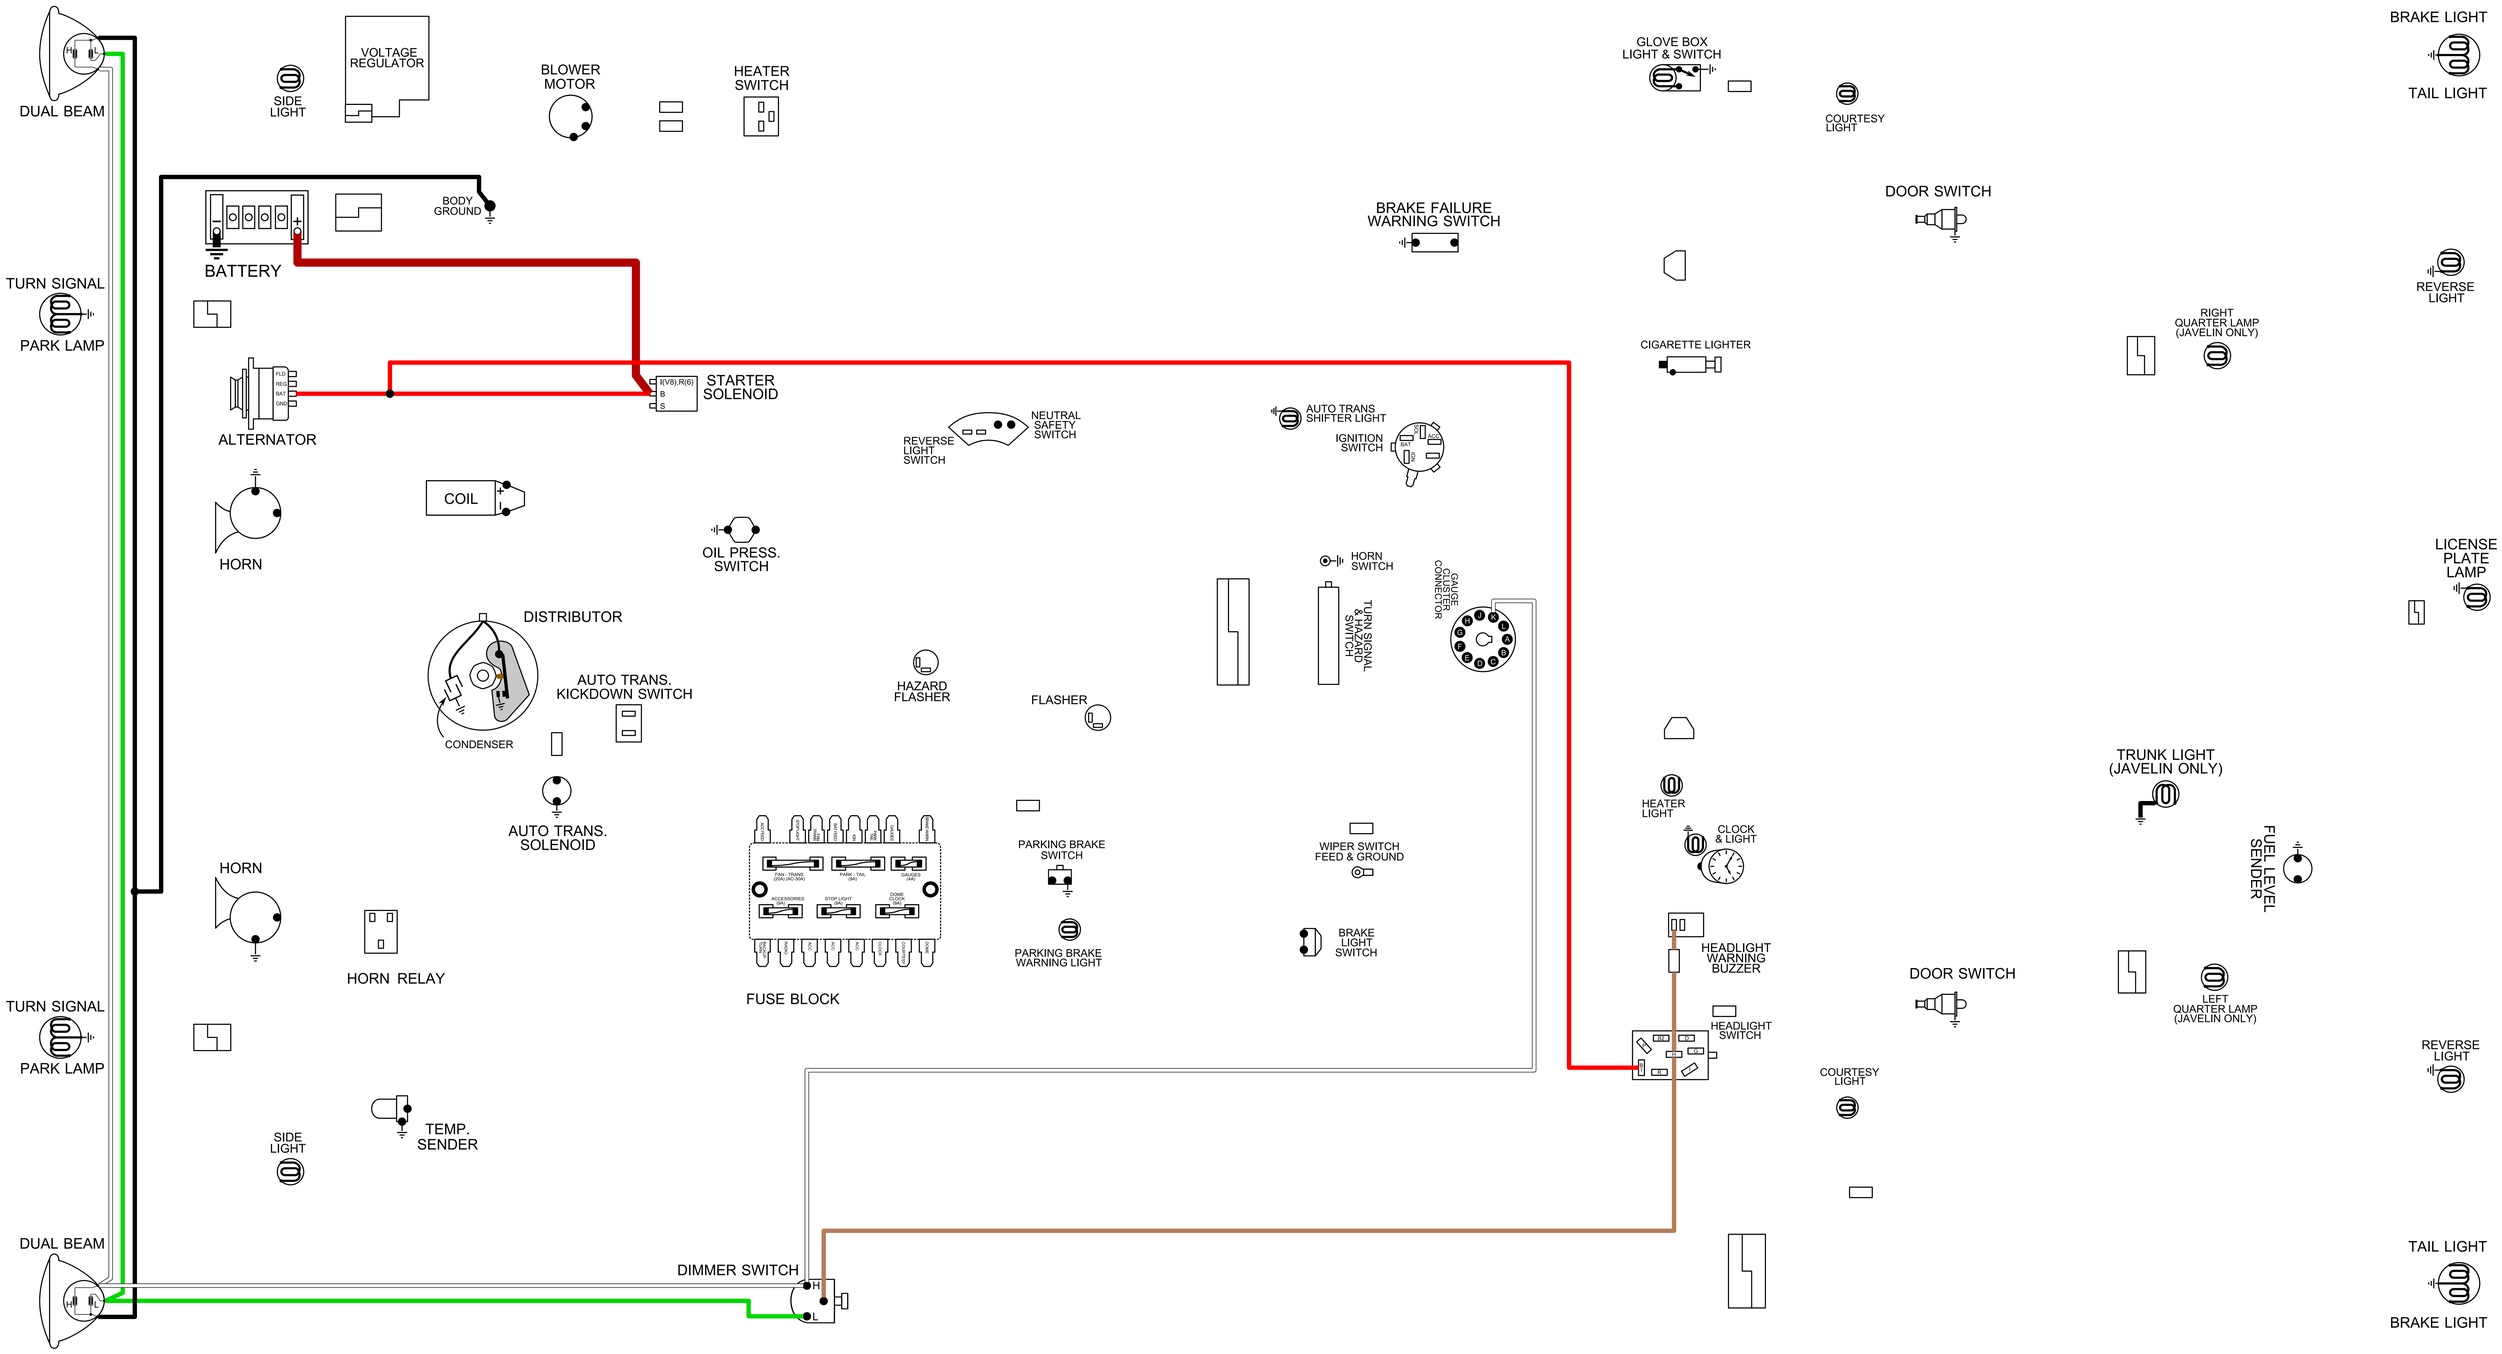


CINCO

1968 AMC JAVELIN & AMX
RUNNING LIGHTS

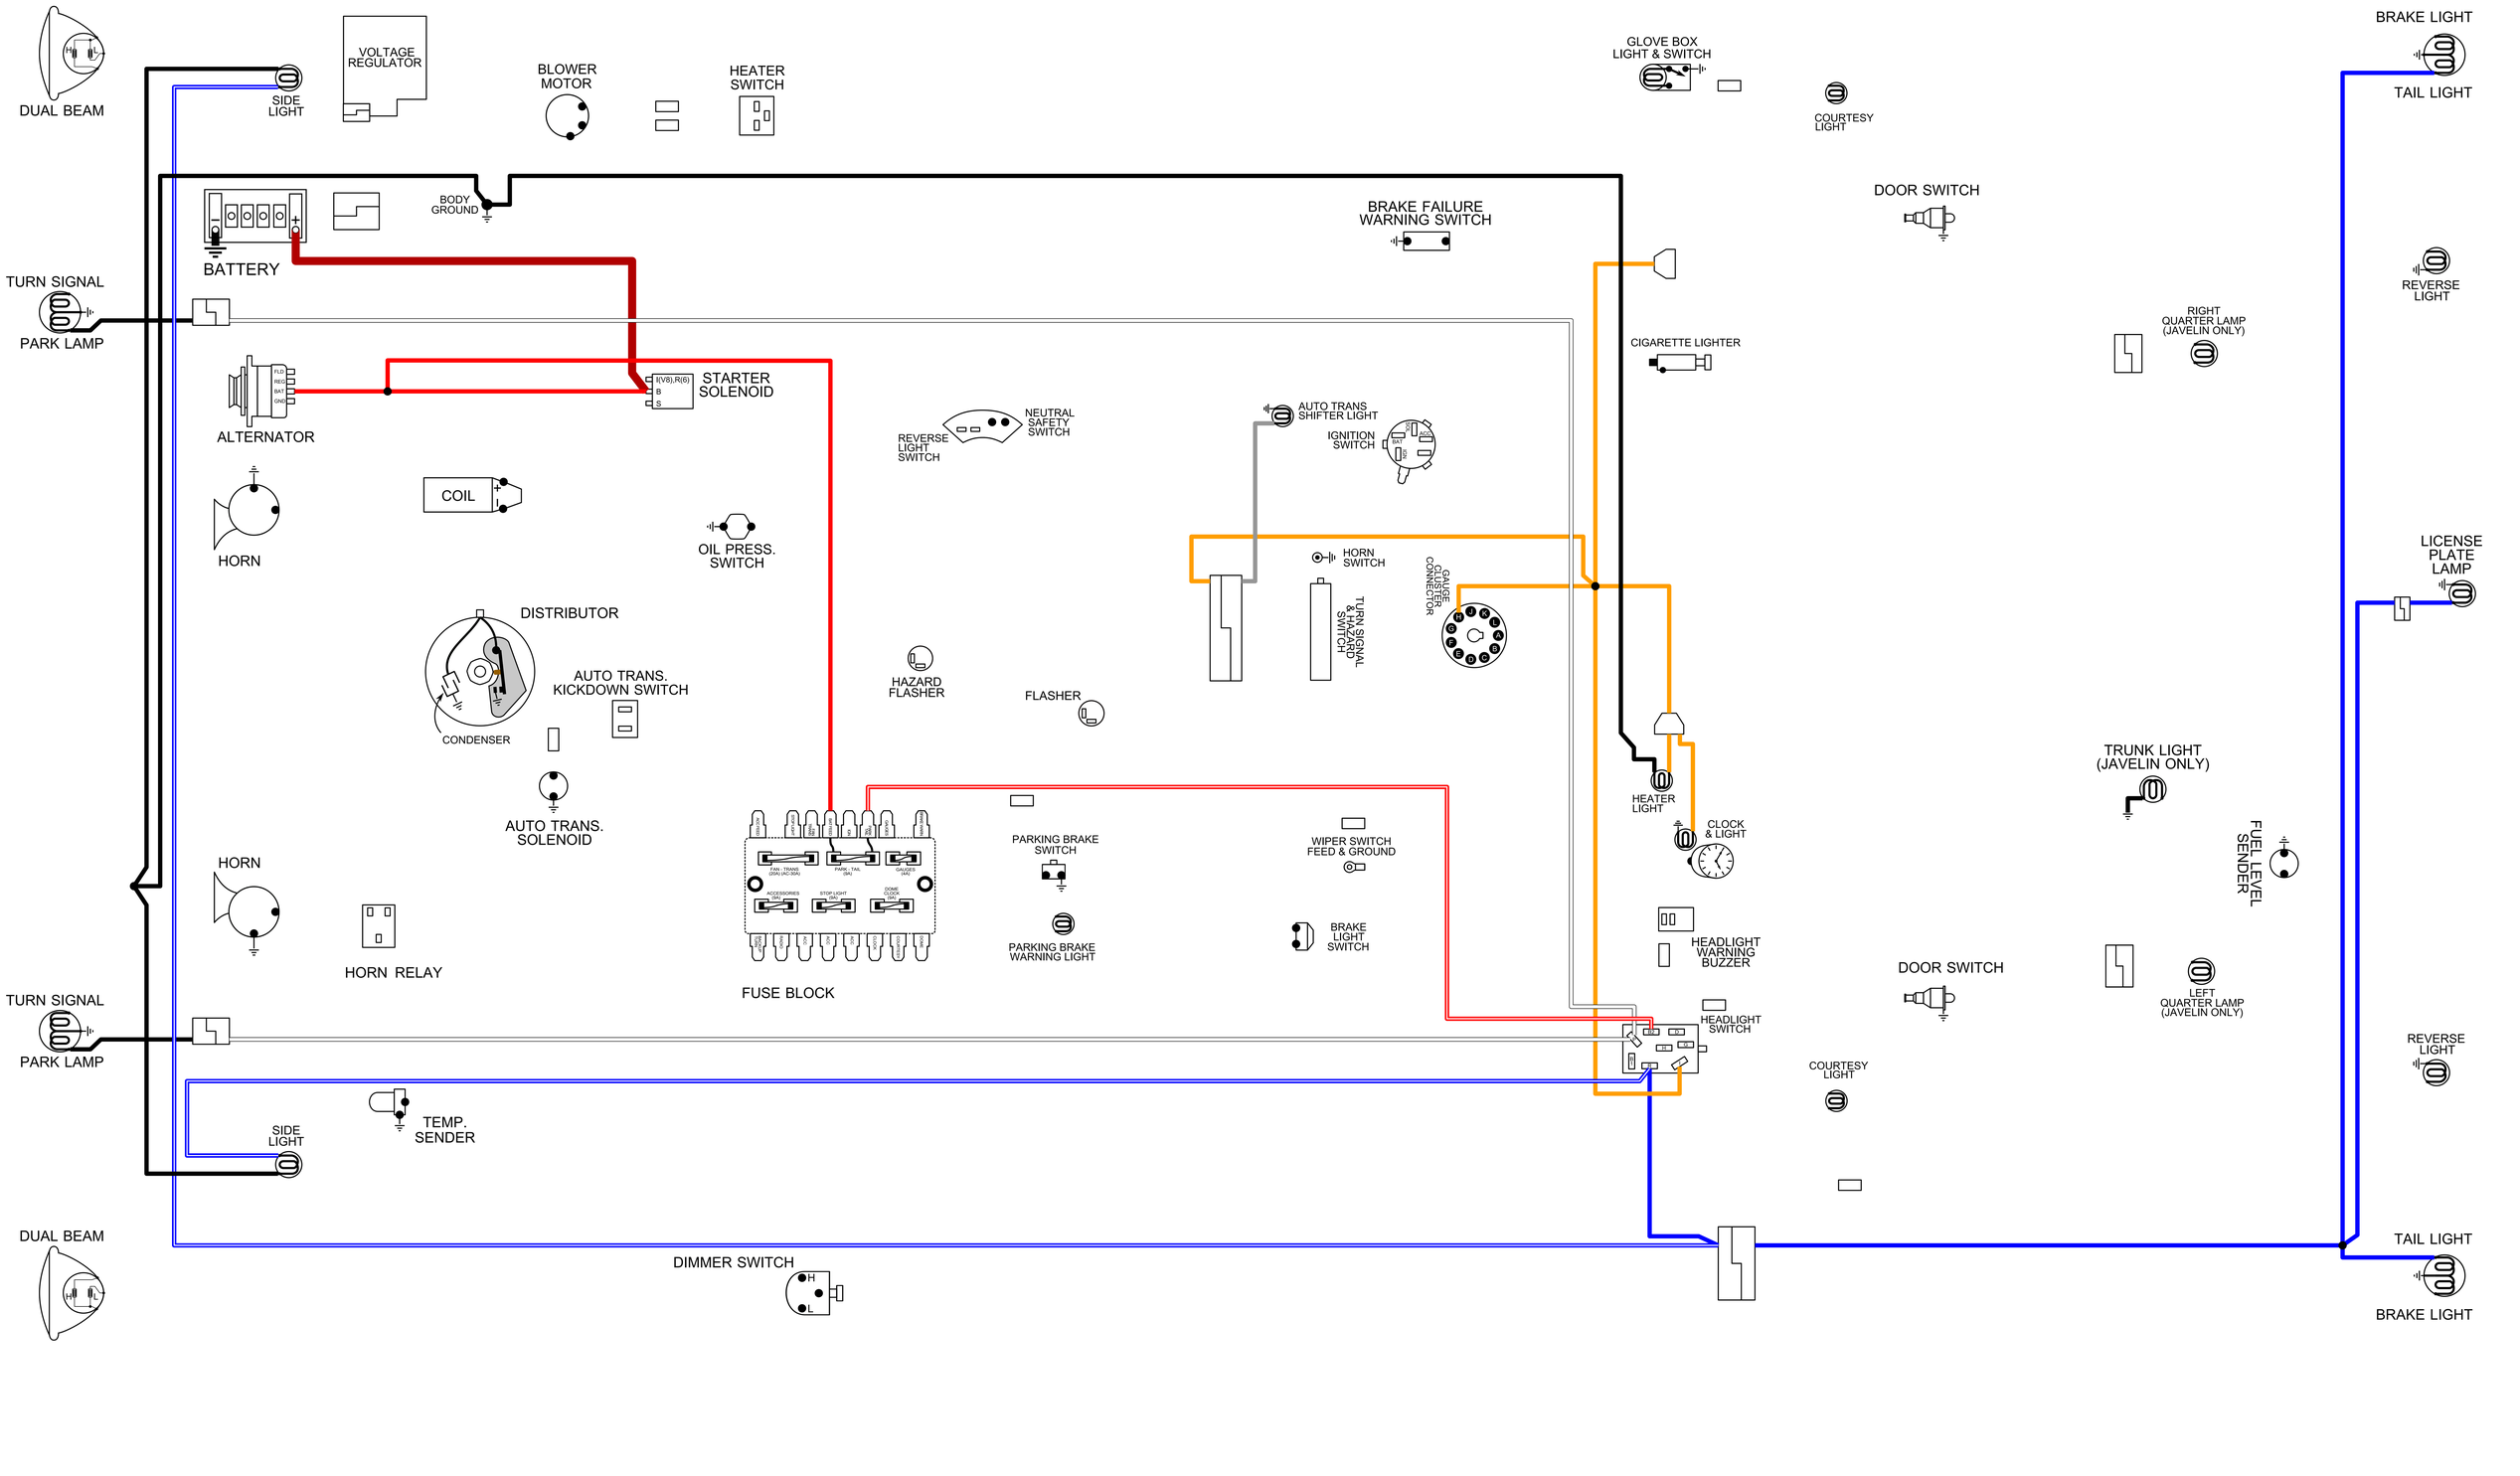


CINCO

1968 AMC JAVELIN & AMX
BRAKE LIGHTS

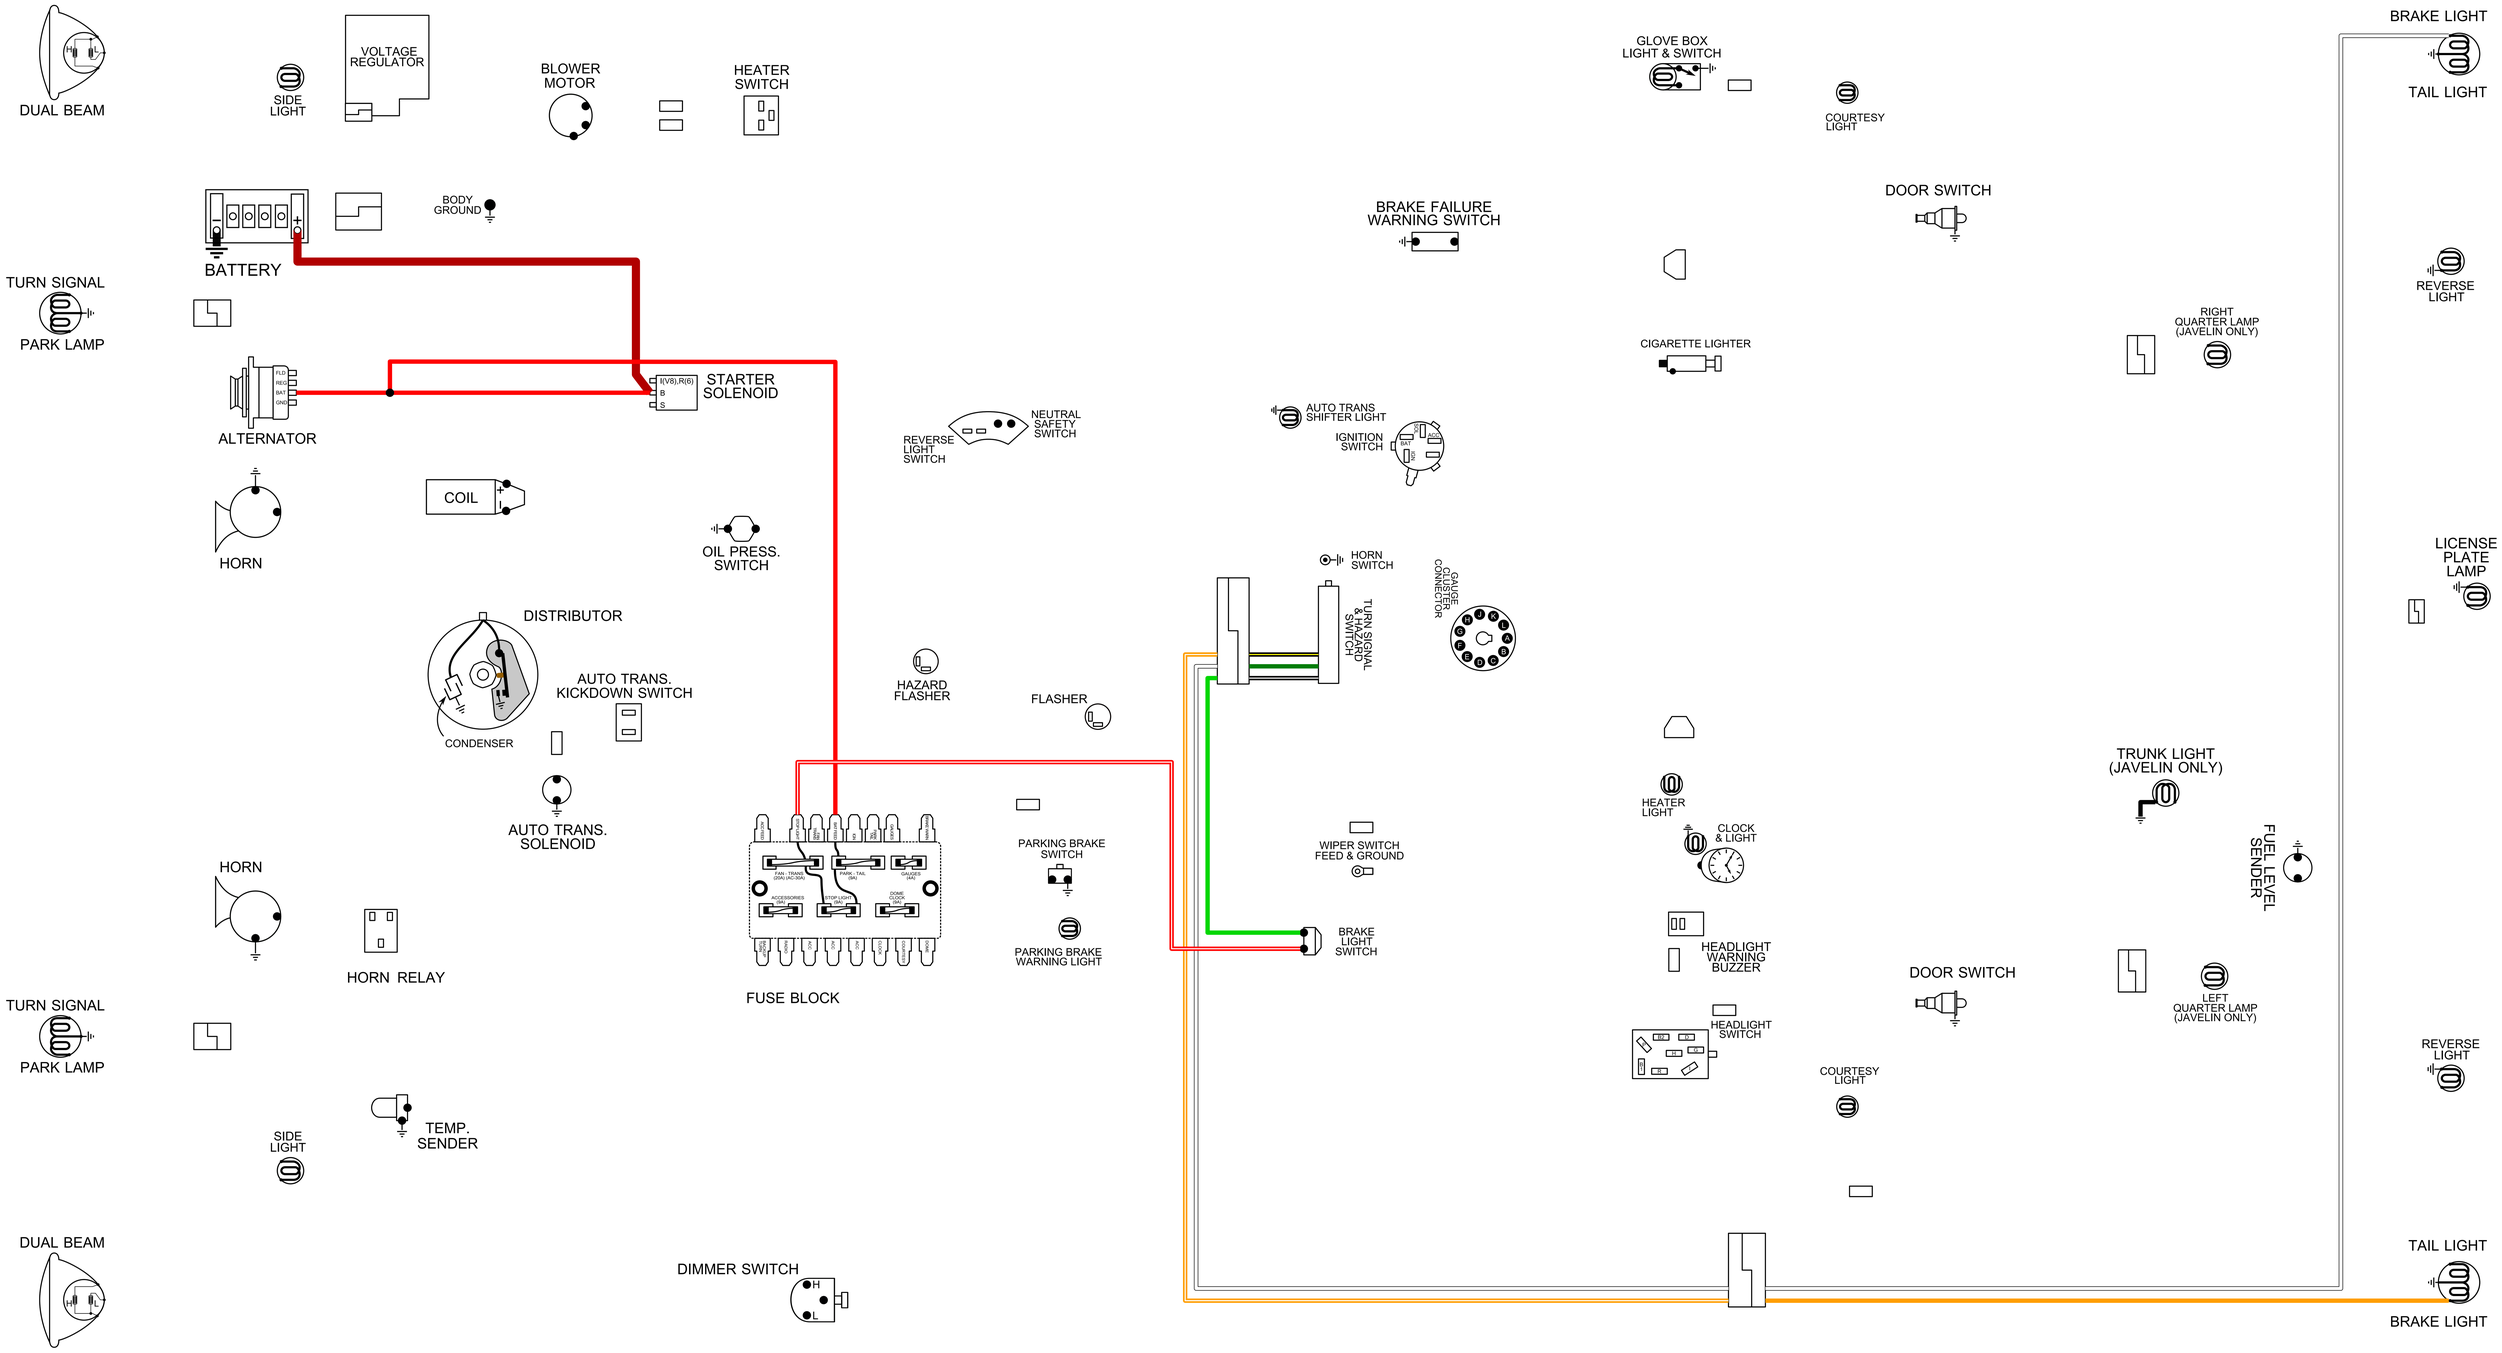


1968 AMC JAVELIN & AMX
TURN SIGNALS

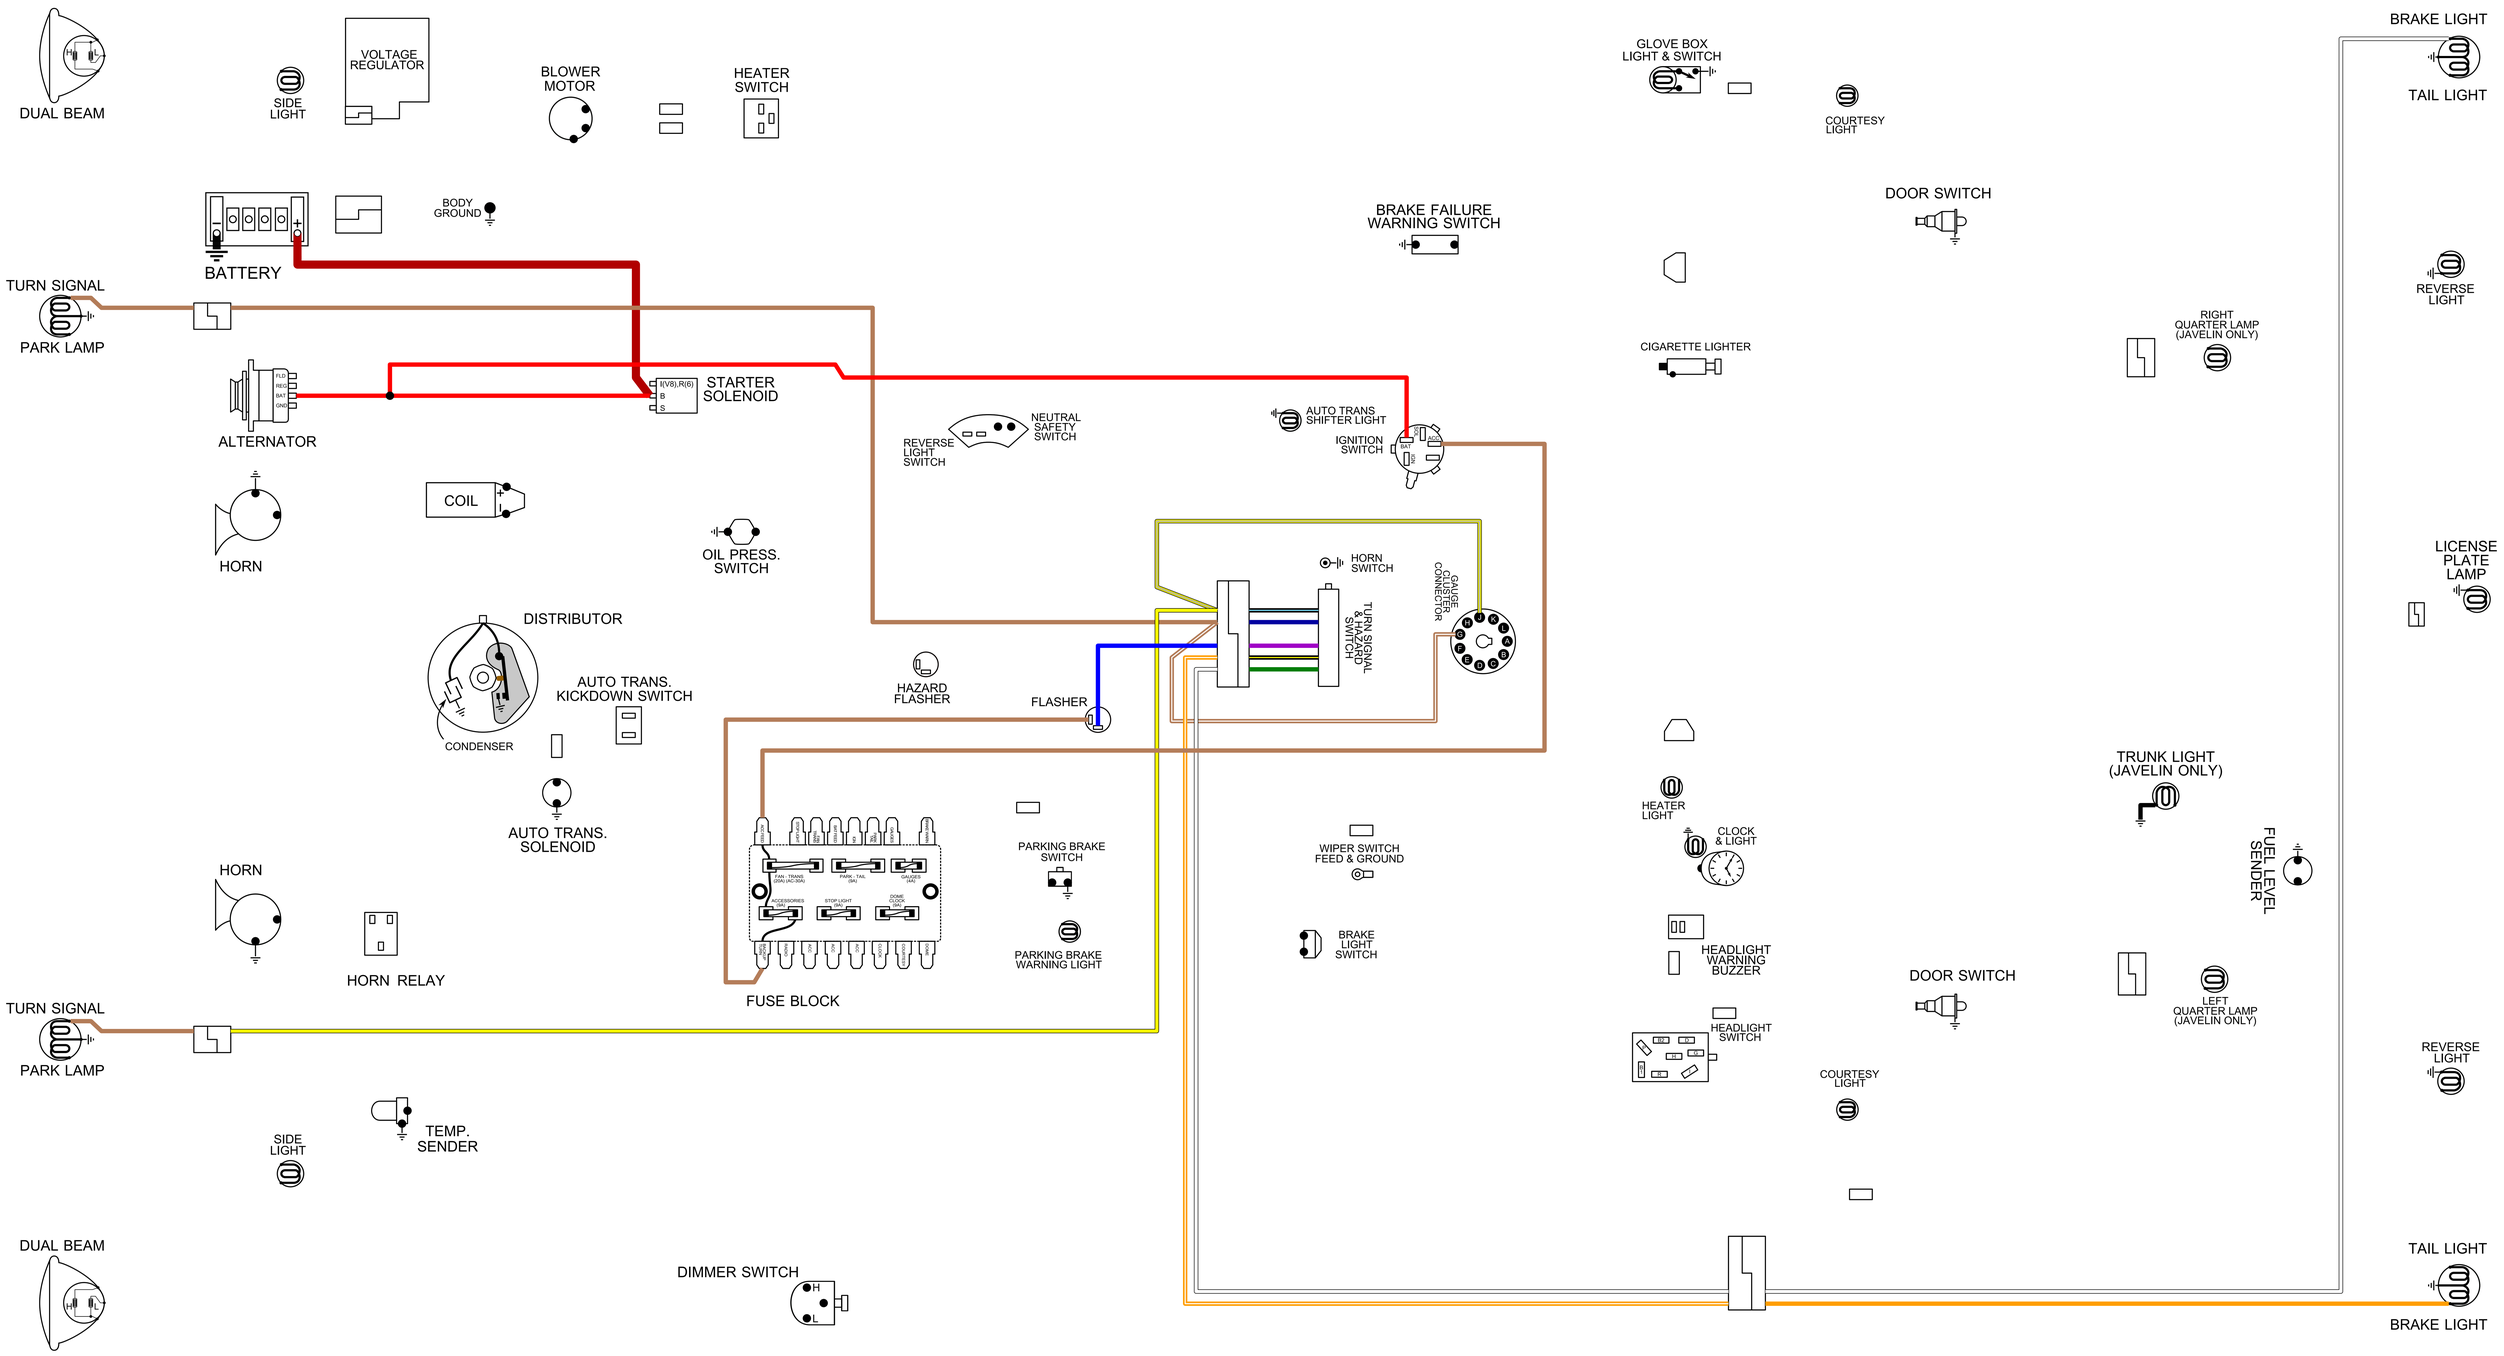

CINCO


1968 AMC JAVELIN & AMX
HEATER

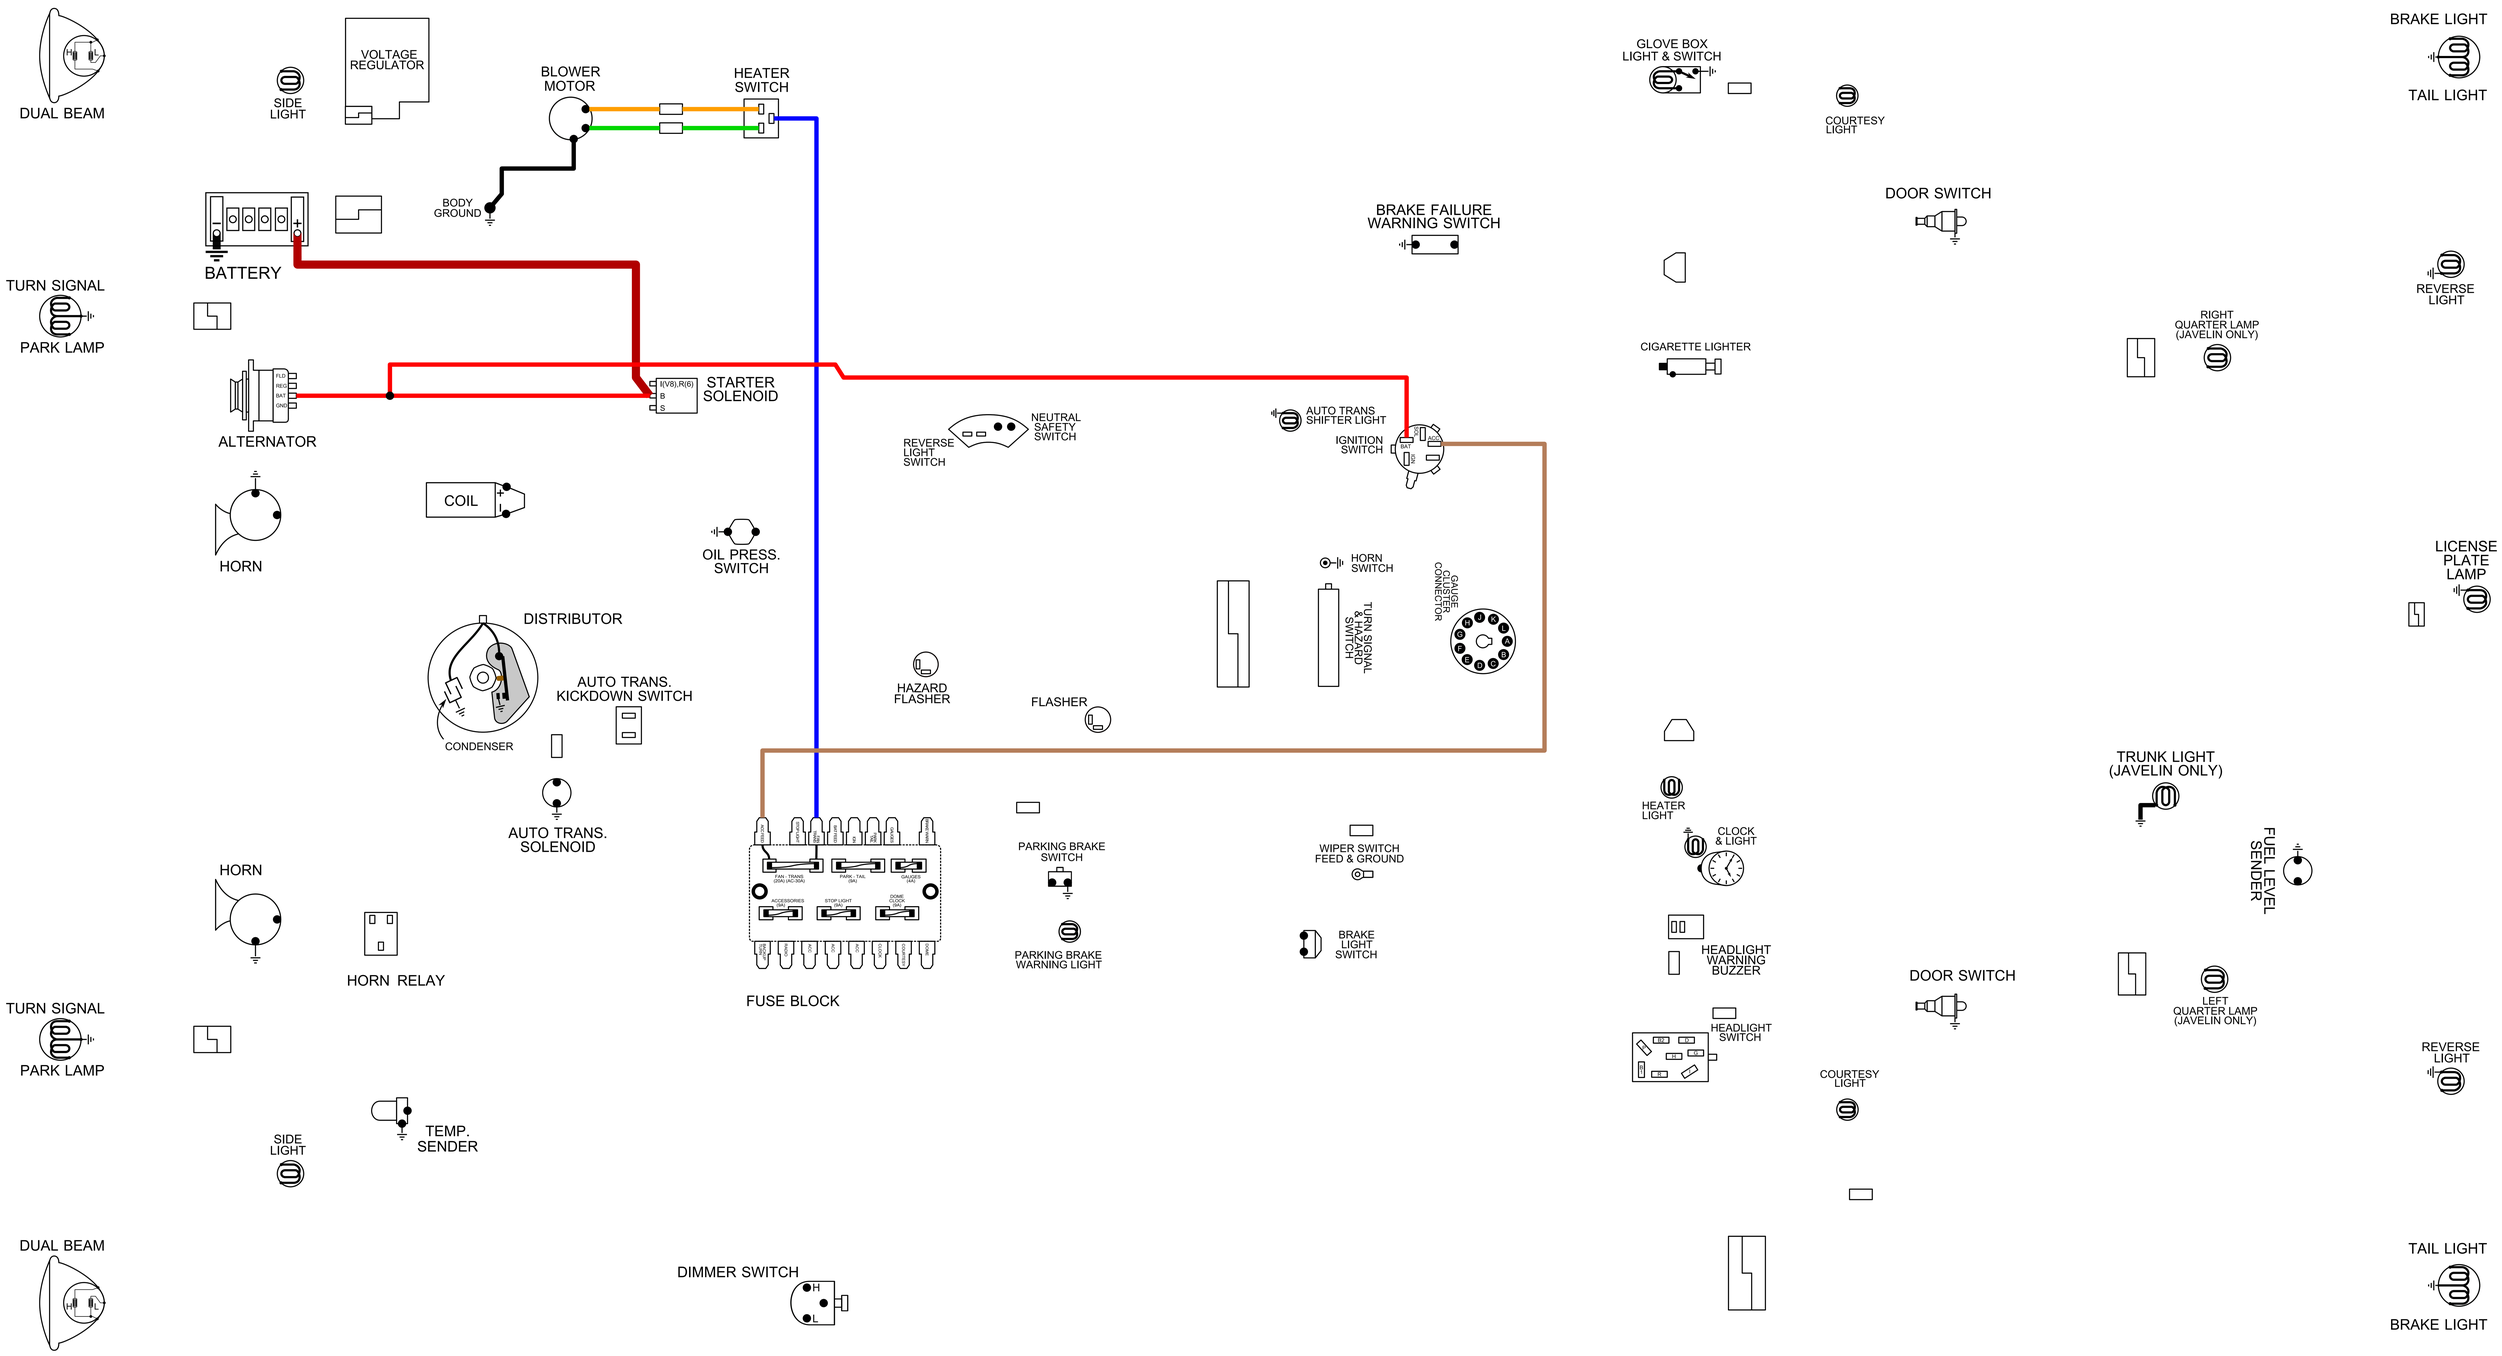

CINCO

1968 AMC JAVELIN & AMX

HORN

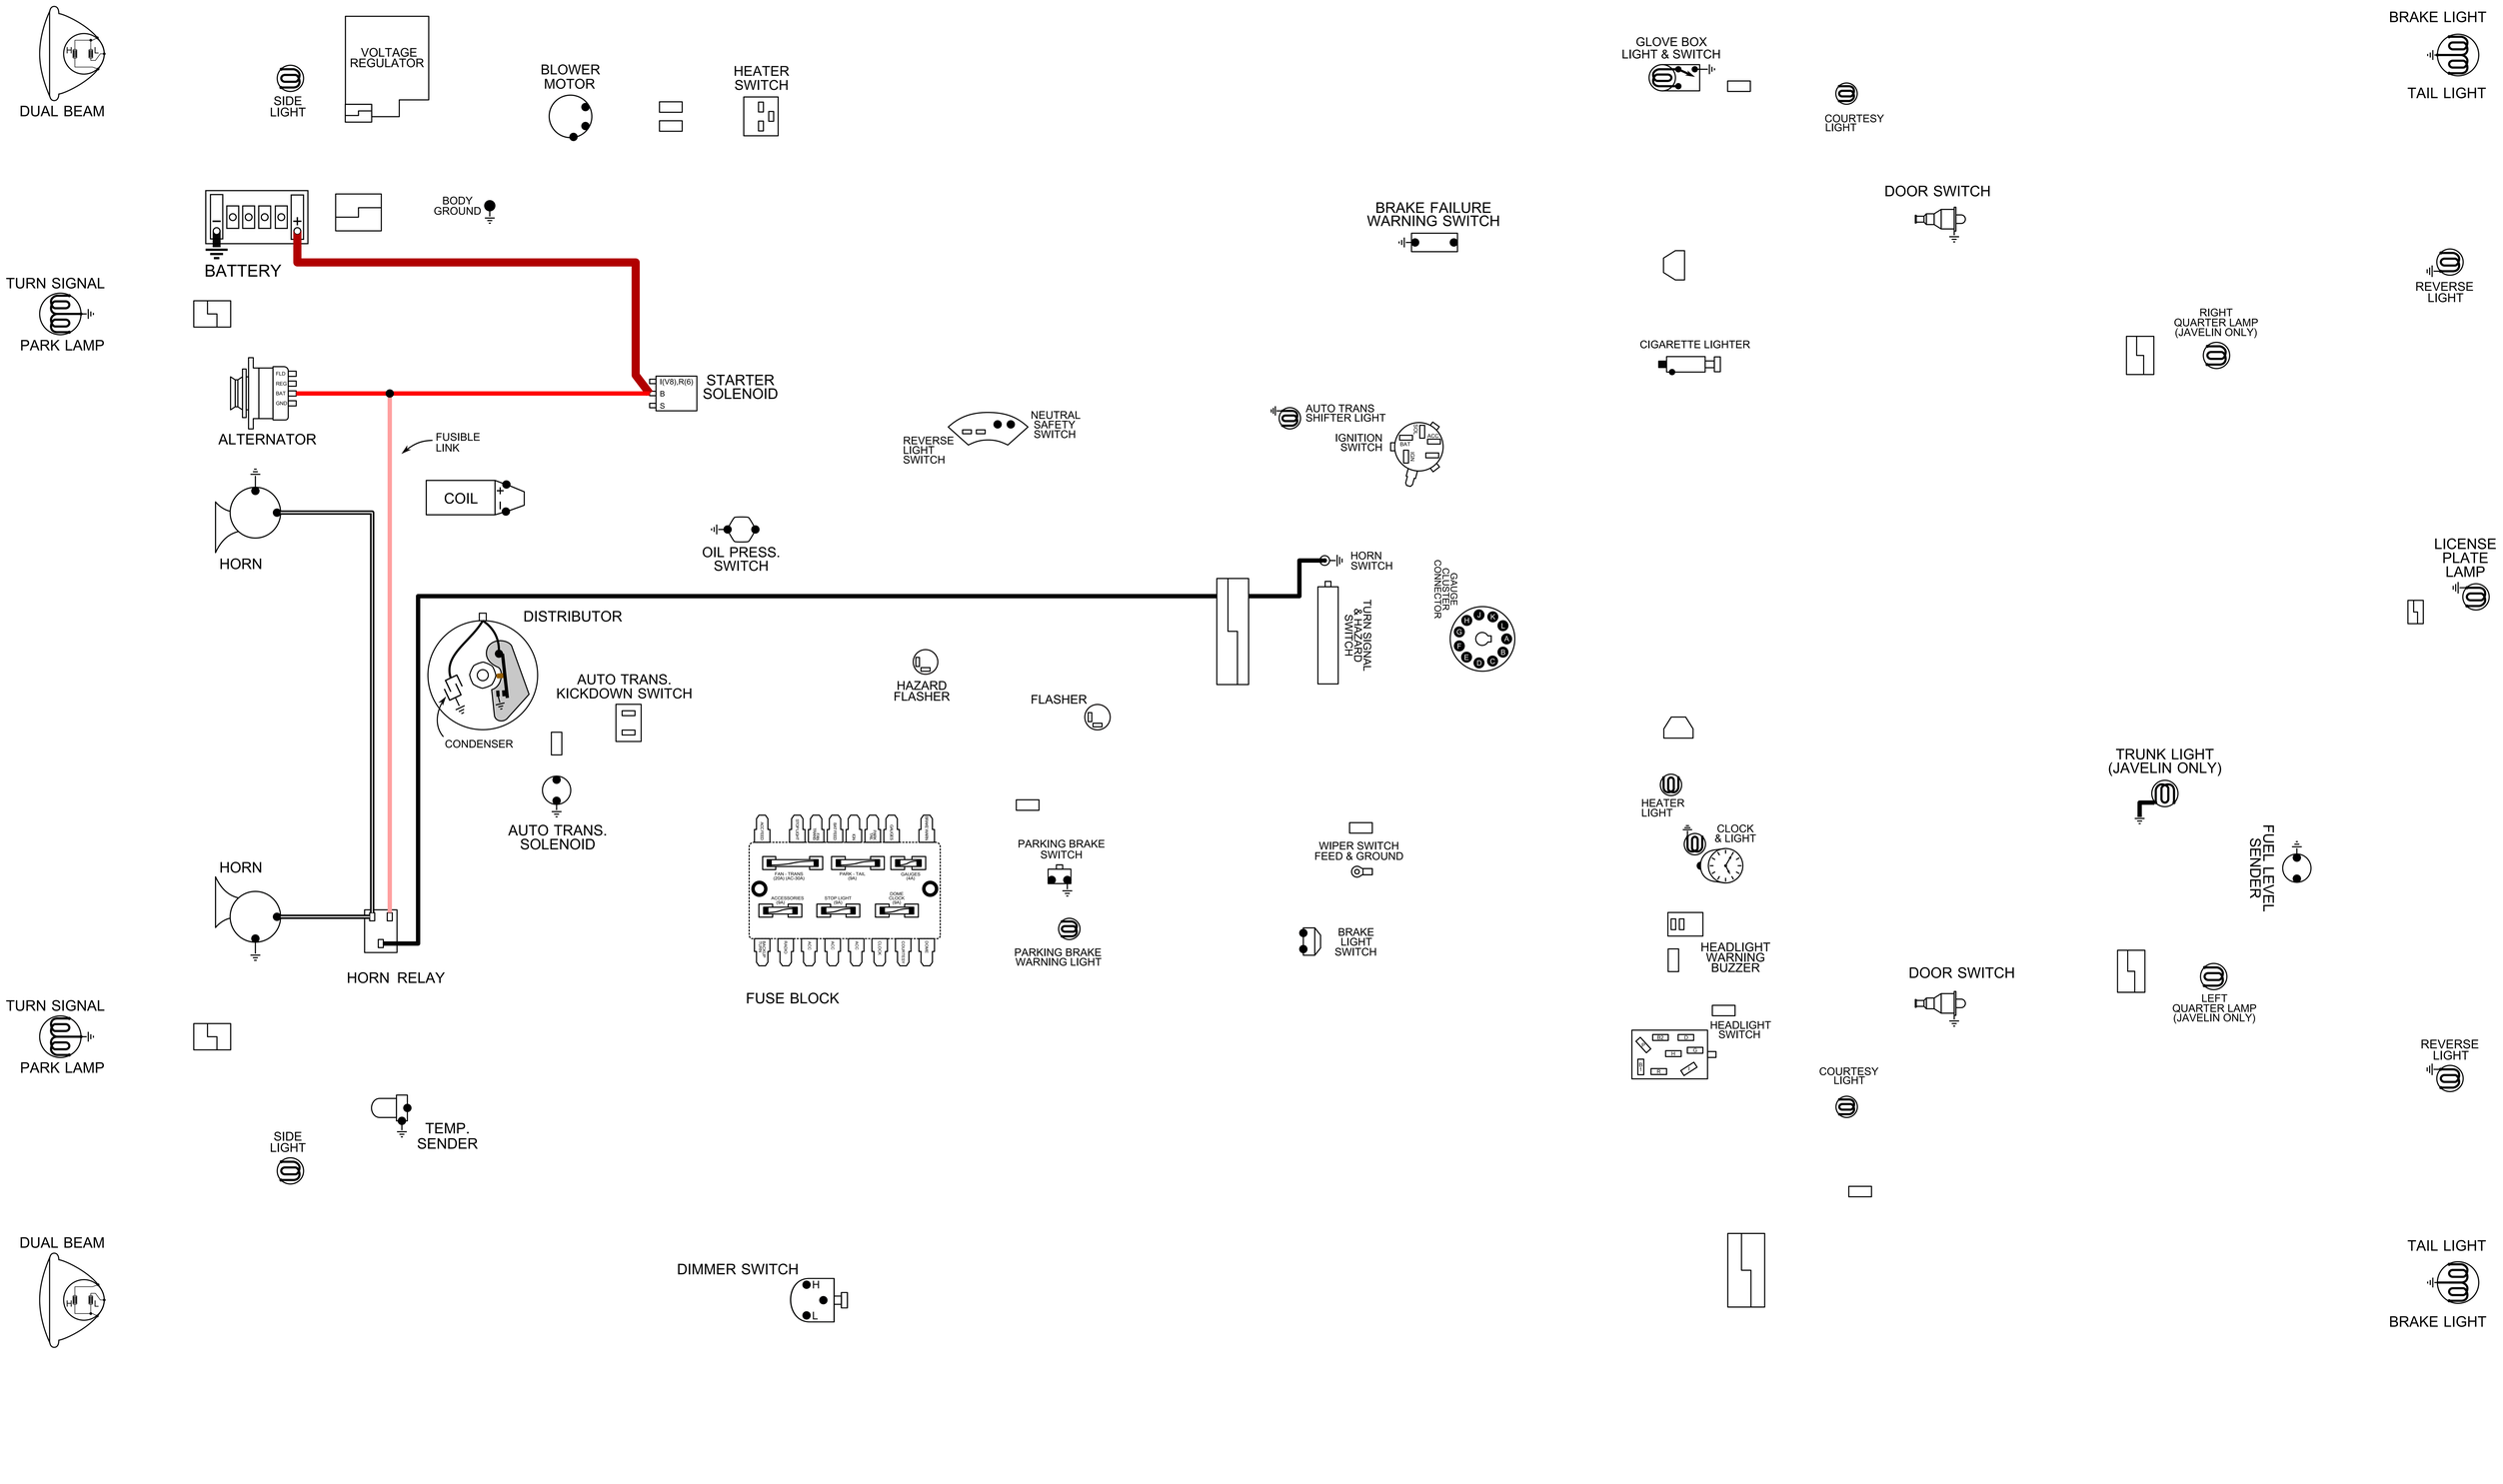


CINCO

1968 AMC JAVELIN & AMX
TRANSMISSION

DUAL BEAM
SIDE LIGHT
VOLTAGE REGULATOR
BLOWER MOTOR
HEATER SWITCH
GLOVE BOX LIGHT & SWITCH
COURTESY LIGHT
BRAKE LIGHT
TAIL LIGHT
BODY GROUND
BRAKE FAILURE WARNING SWITCH
DOOR SWITCH
BATTERY
TURN SIGNAL
PARK LAMP
REVERSE LIGHT
RIGHT QUARTER LAMP (JAVELIN ONLY)
CIGARETTE LIGHTER
ALTERNATOR
I(V8),R(6)
B
S
STARTER SOLENOID
REVERSE LIGHT SWITCH
NEUTRAL SAFETY SWITCH
AUTO TRANS SHIFTER LIGHT
IGNITION SWITCH
HORN
COIL
OIL PRESS. SWITCH
LICENSE PLATE LAMP
DISTRIBUTOR
HORN SWITCH
TURN SIGNAL & HAZARD SWITCH
GAUGE CLUSTER CONNECTOR
CONDENSER
AUTO TRANS. KICKDOWN SWITCH
HAZARD FLASHER
FLASHER
TRUNK LIGHT (JAVELIN ONLY)
HEATER LIGHT
CLOCK & LIGHT
FUEL LEVEL SENDER
HORN
PARKING BRAKE SWITCH
WIPER SWITCH FEED & GROUND
HEADLIGHT WARNING BUZZER
HORN RELAY
AUTO TRANS. SOLENOID
FUSE BLOCK
BRAKE LIGHT SWITCH
DOOR SWITCH
TURN SIGNAL
PARK LAMP
PARKING BRAKE WARNING LIGHT
HEADLIGHT SWITCH
LEFT QUARTER LAMP (JAVELIN ONLY)
REVERSE LIGHT
COURTESY LIGHT
SIDE LIGHT
TEMP. SENDER
DUAL BEAM
DIMMER SWITCH
TAIL LIGHT
BRAKE LIGHT


CINCO

1968 AMC JAVELIN & AMX
GAUGES & WARNING LIGHTS

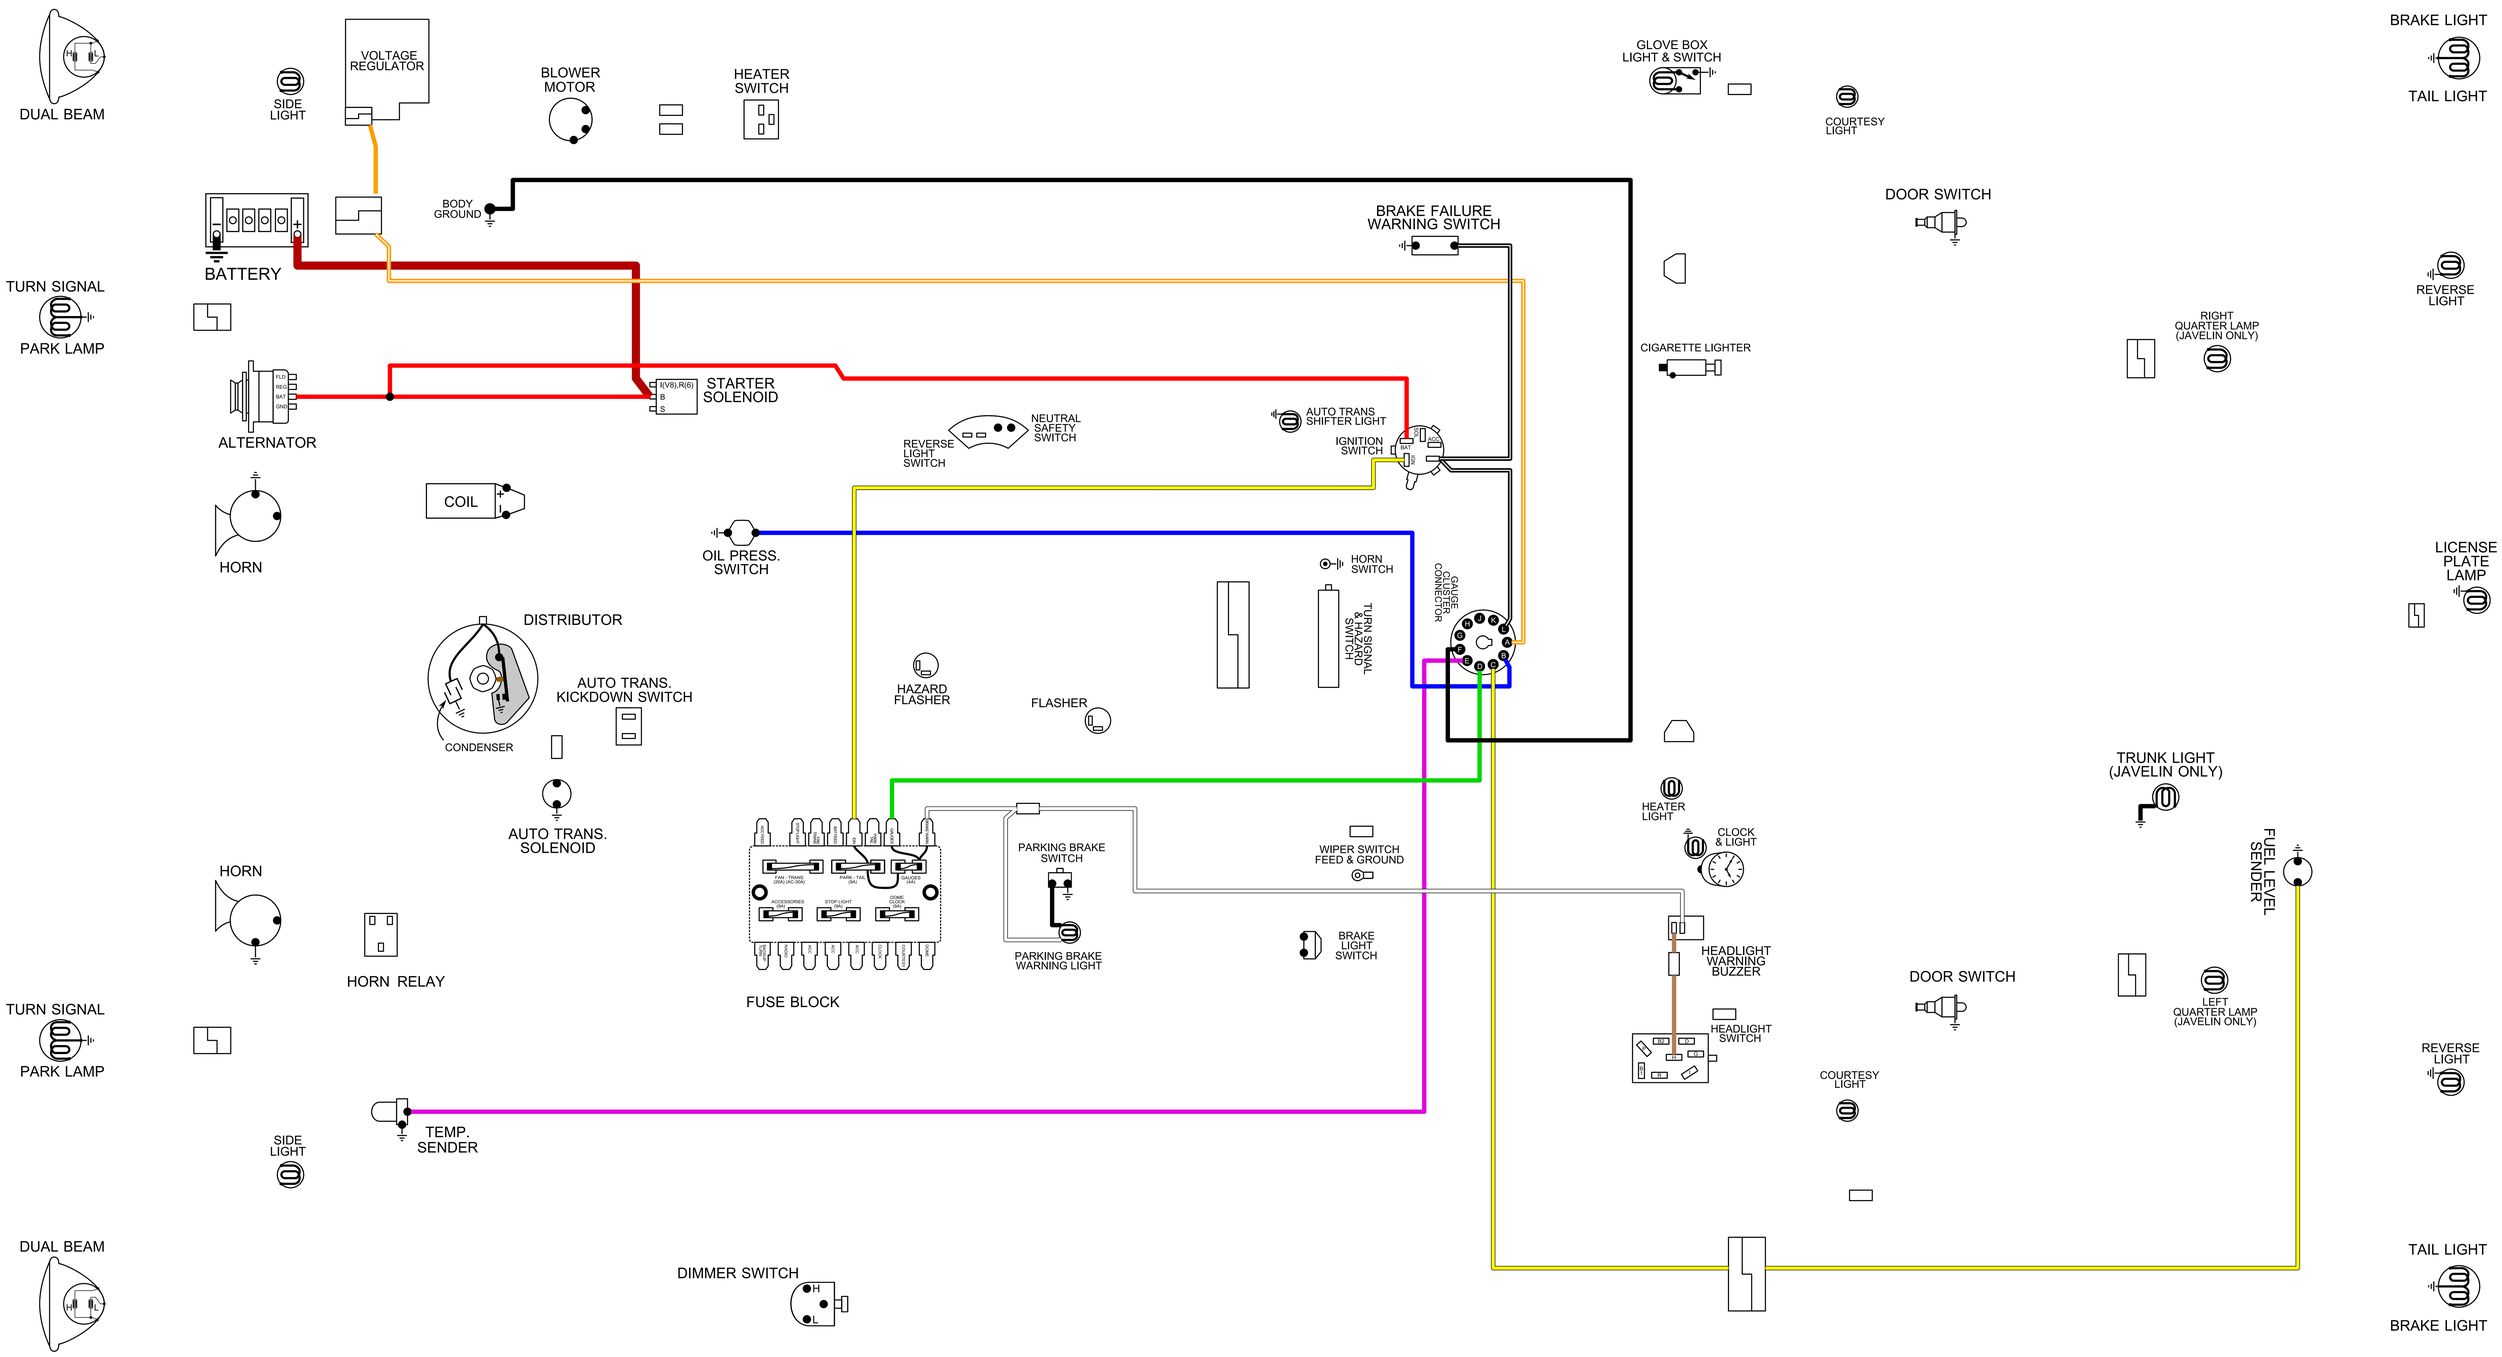


CINCO

1968 AMC JAVELIN & AMX
REVERSE LIGHTS

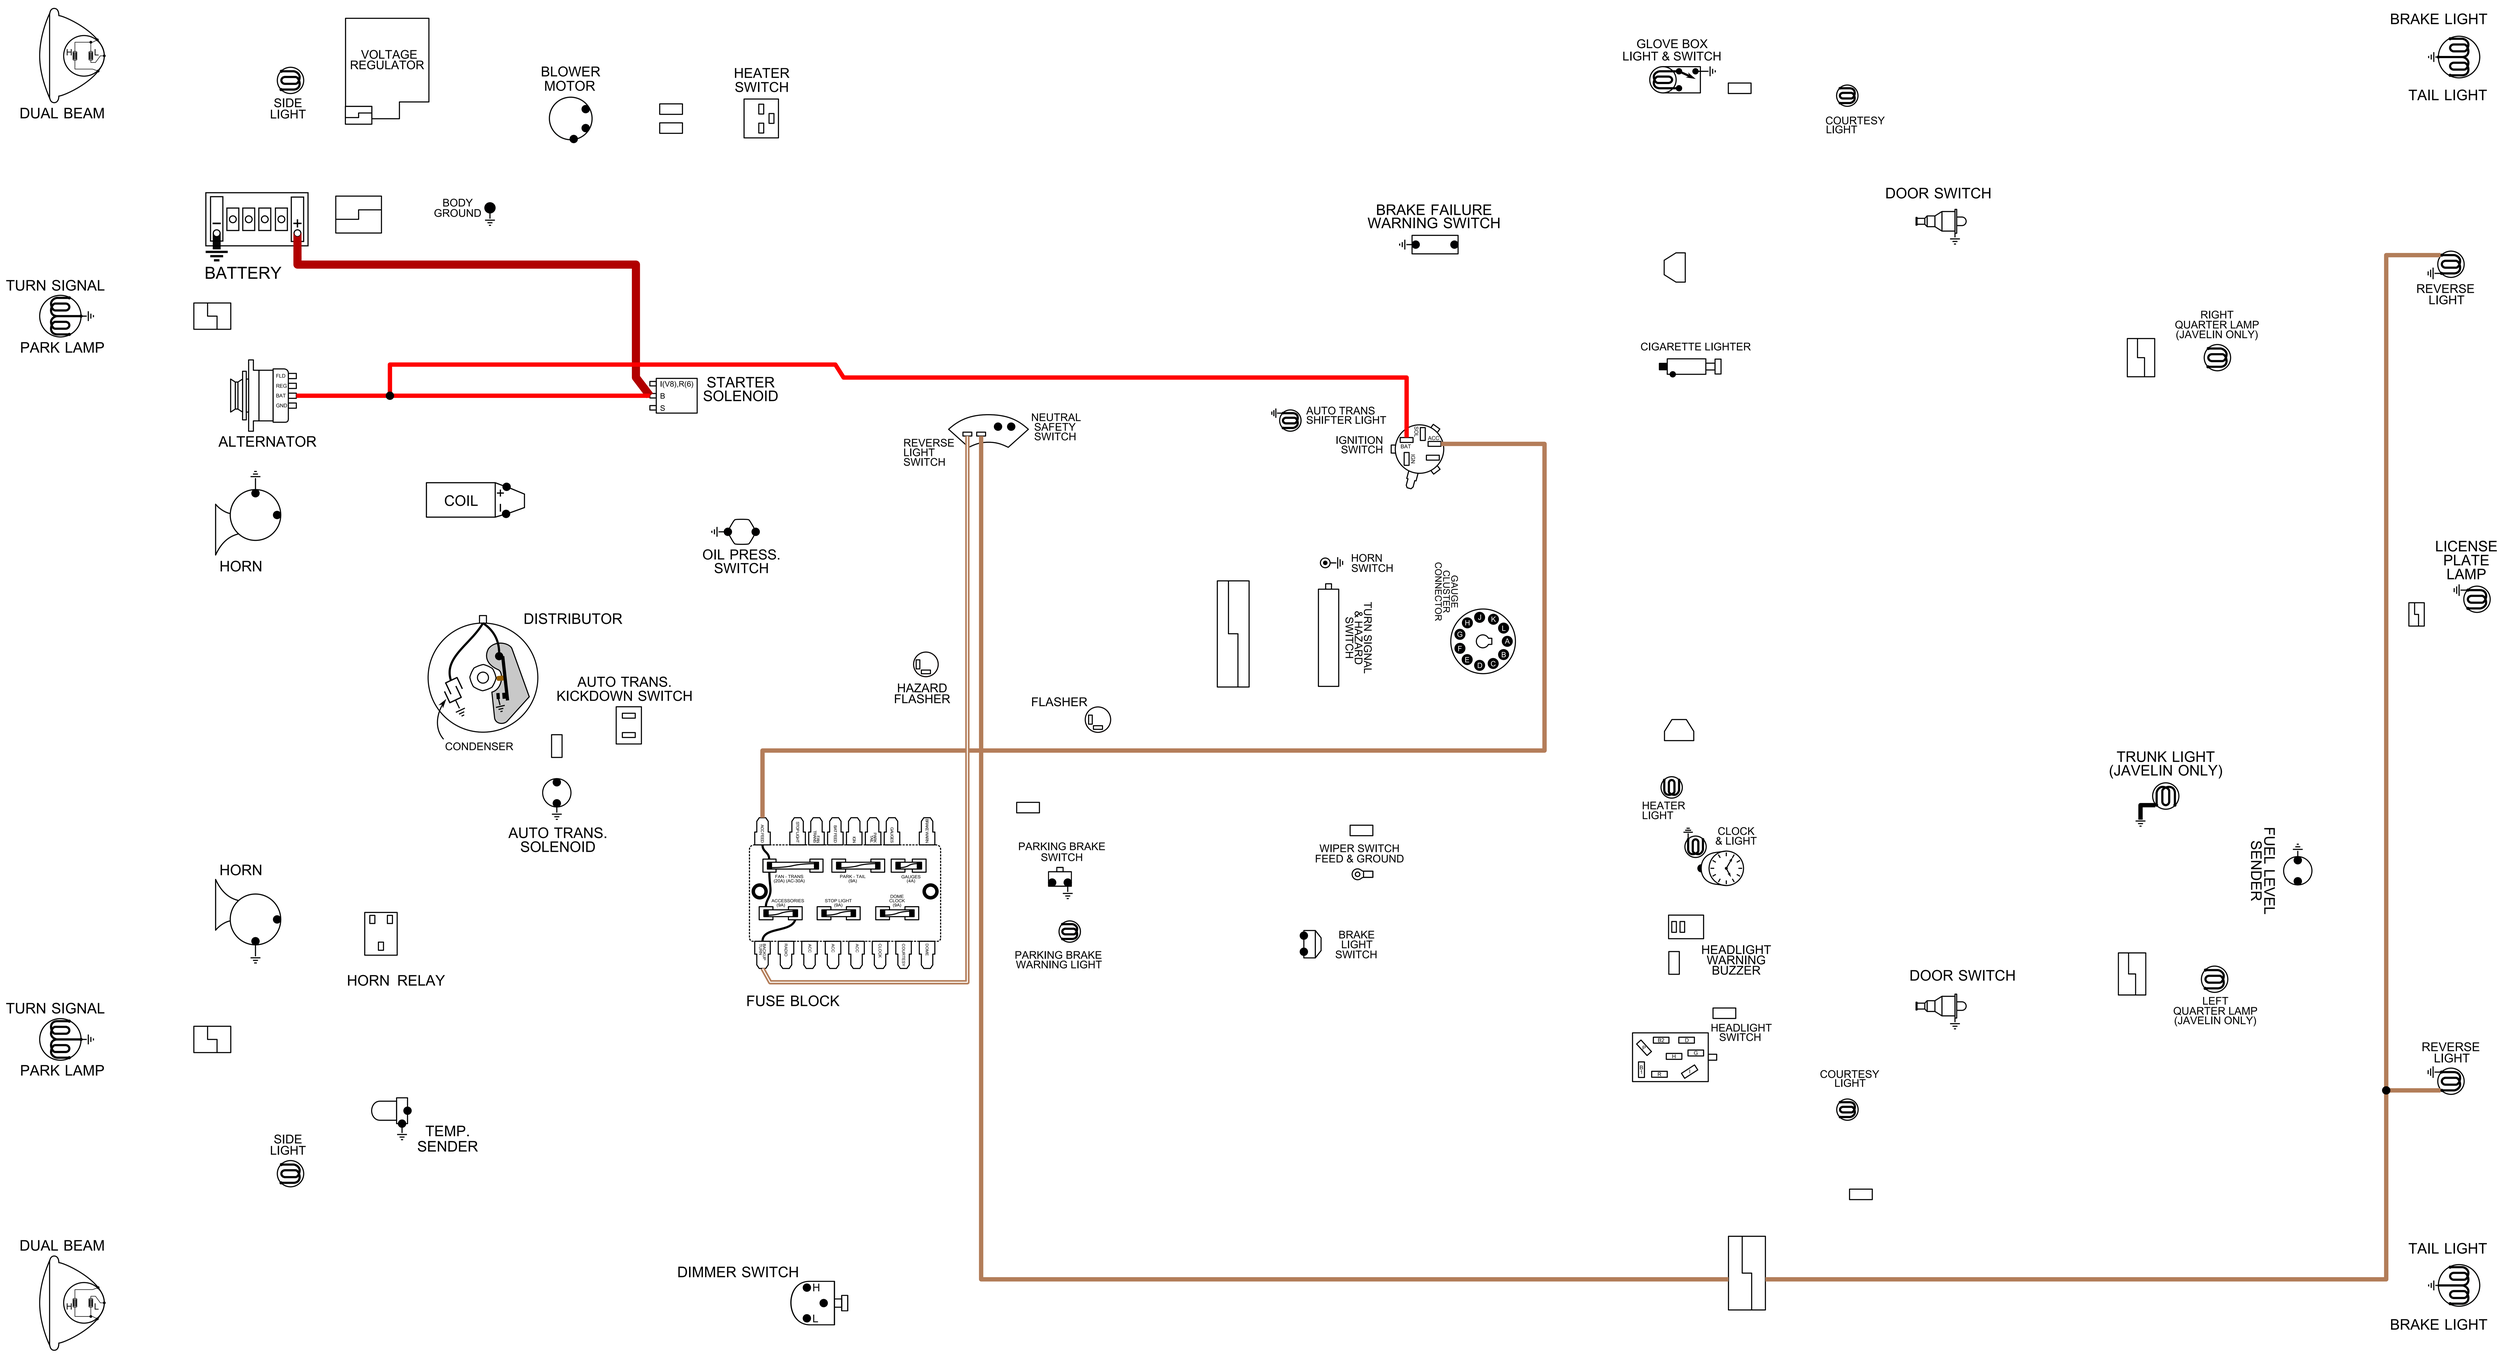


1968 AMC JAVELIN & AMX
DOME & COURTESY LIGHTS

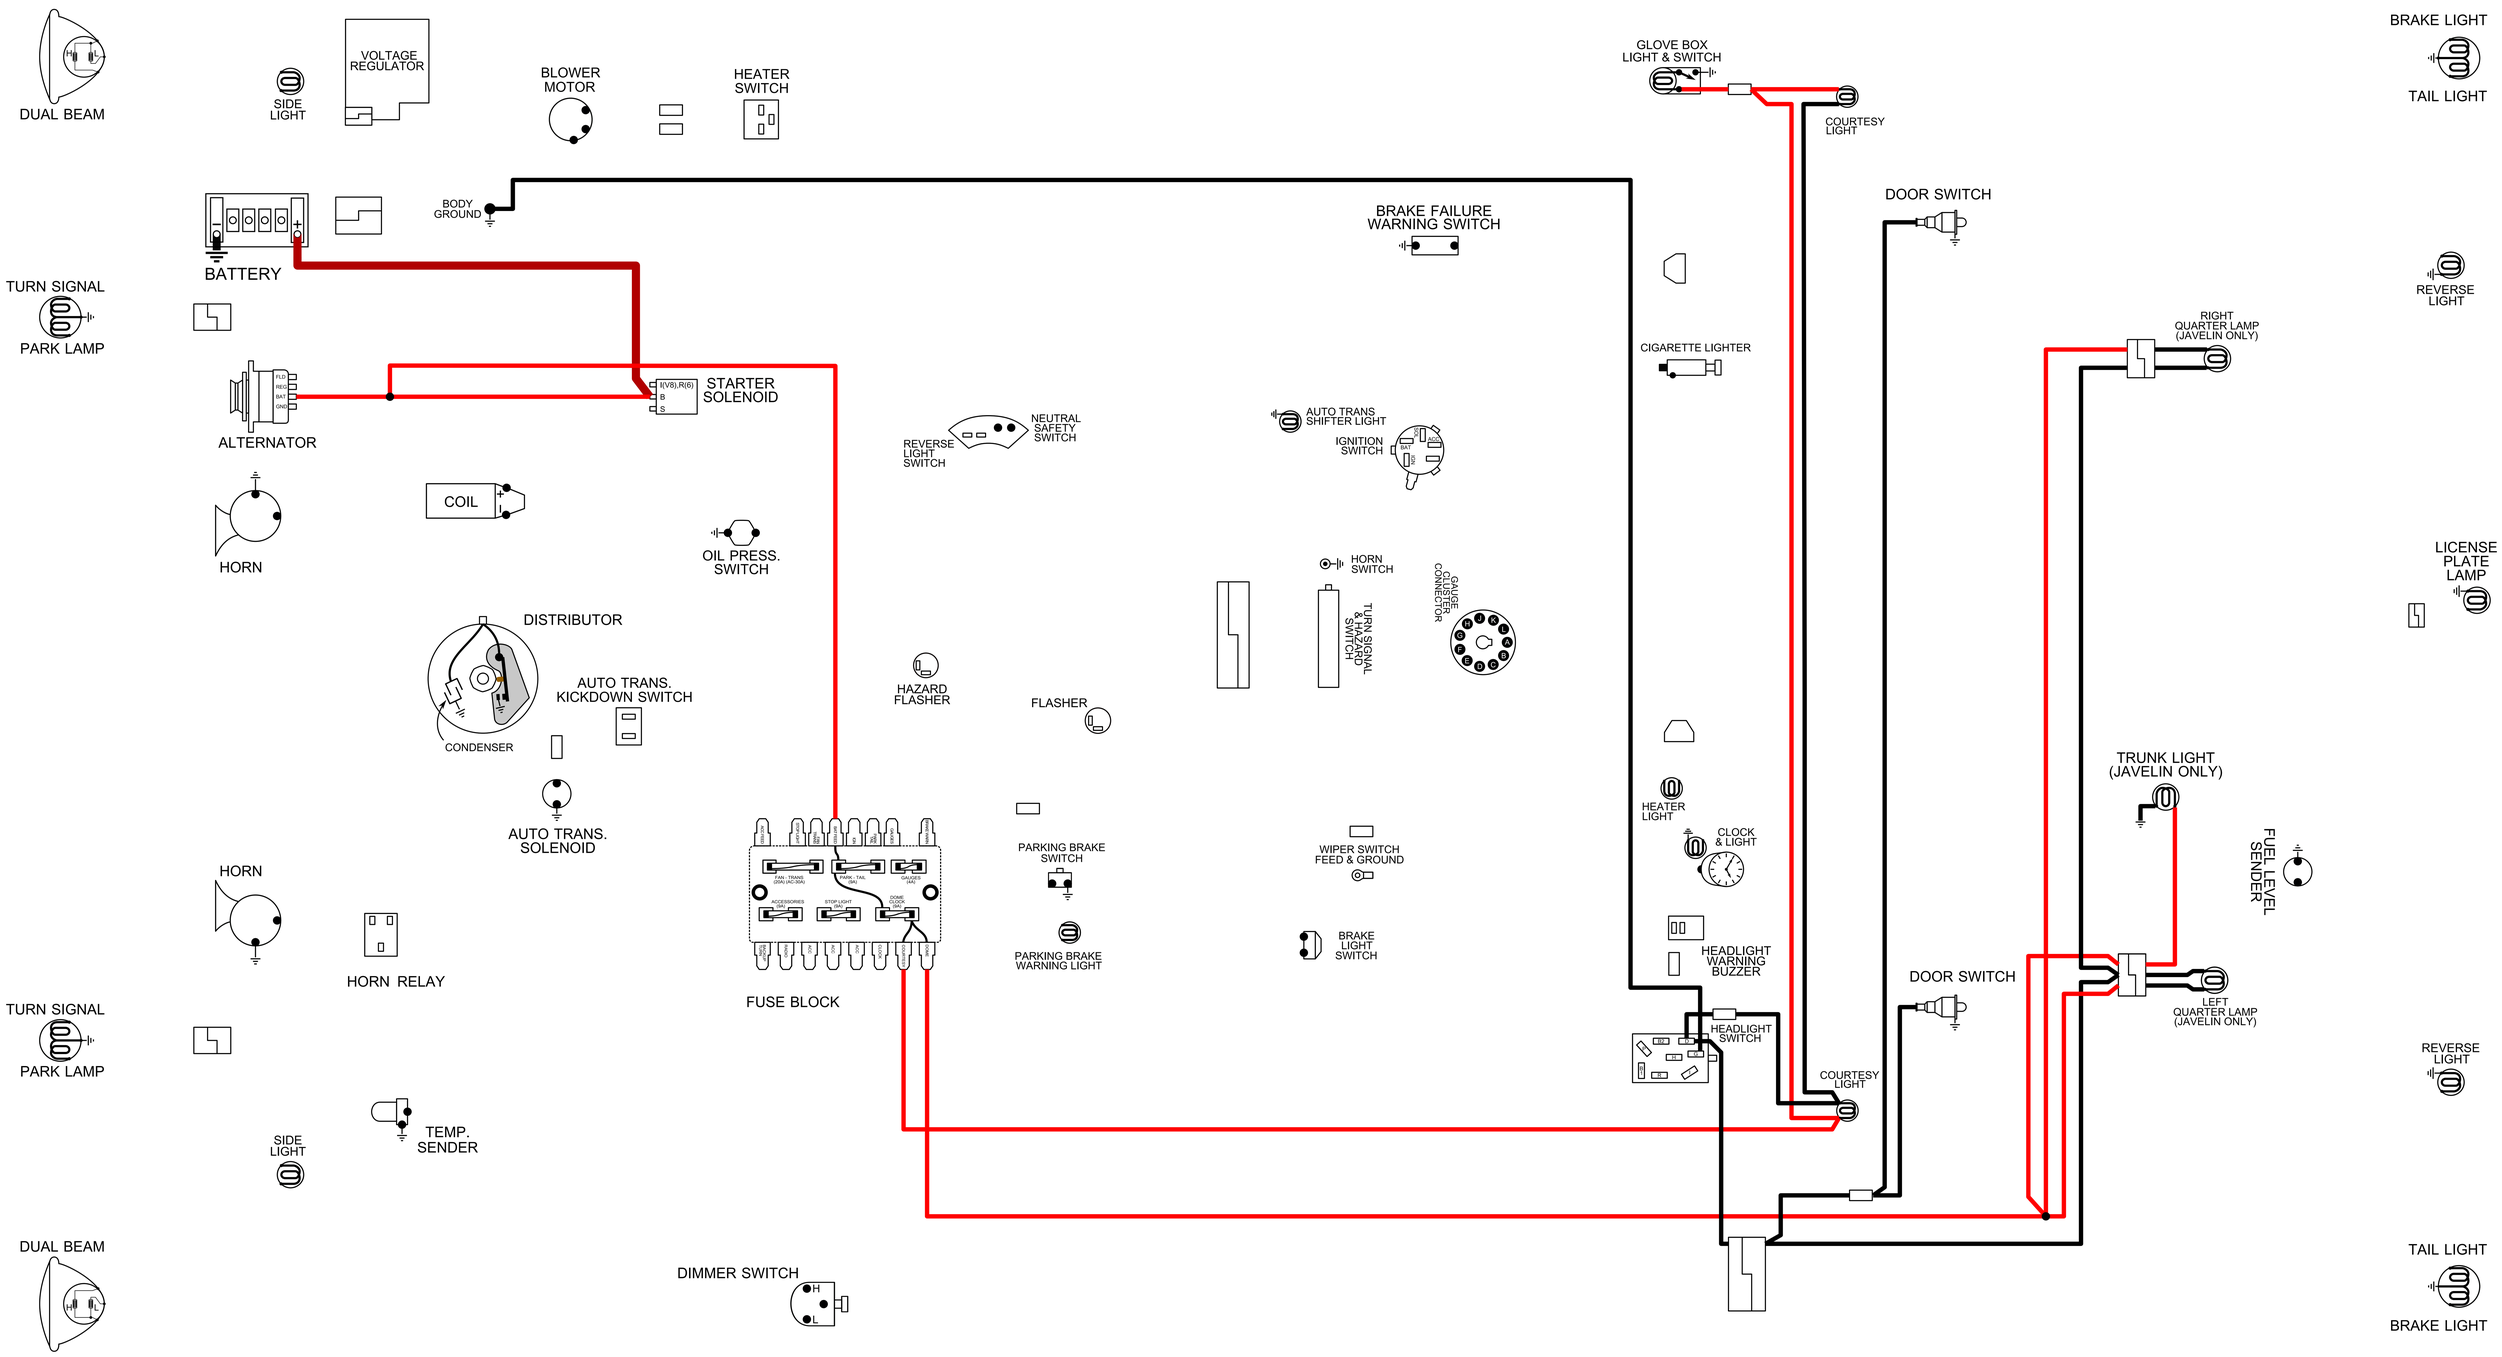

CINCO

1968 AMC JAVELIN & AMX
DASHBOARD PRINTED CIRCUIT BOARD

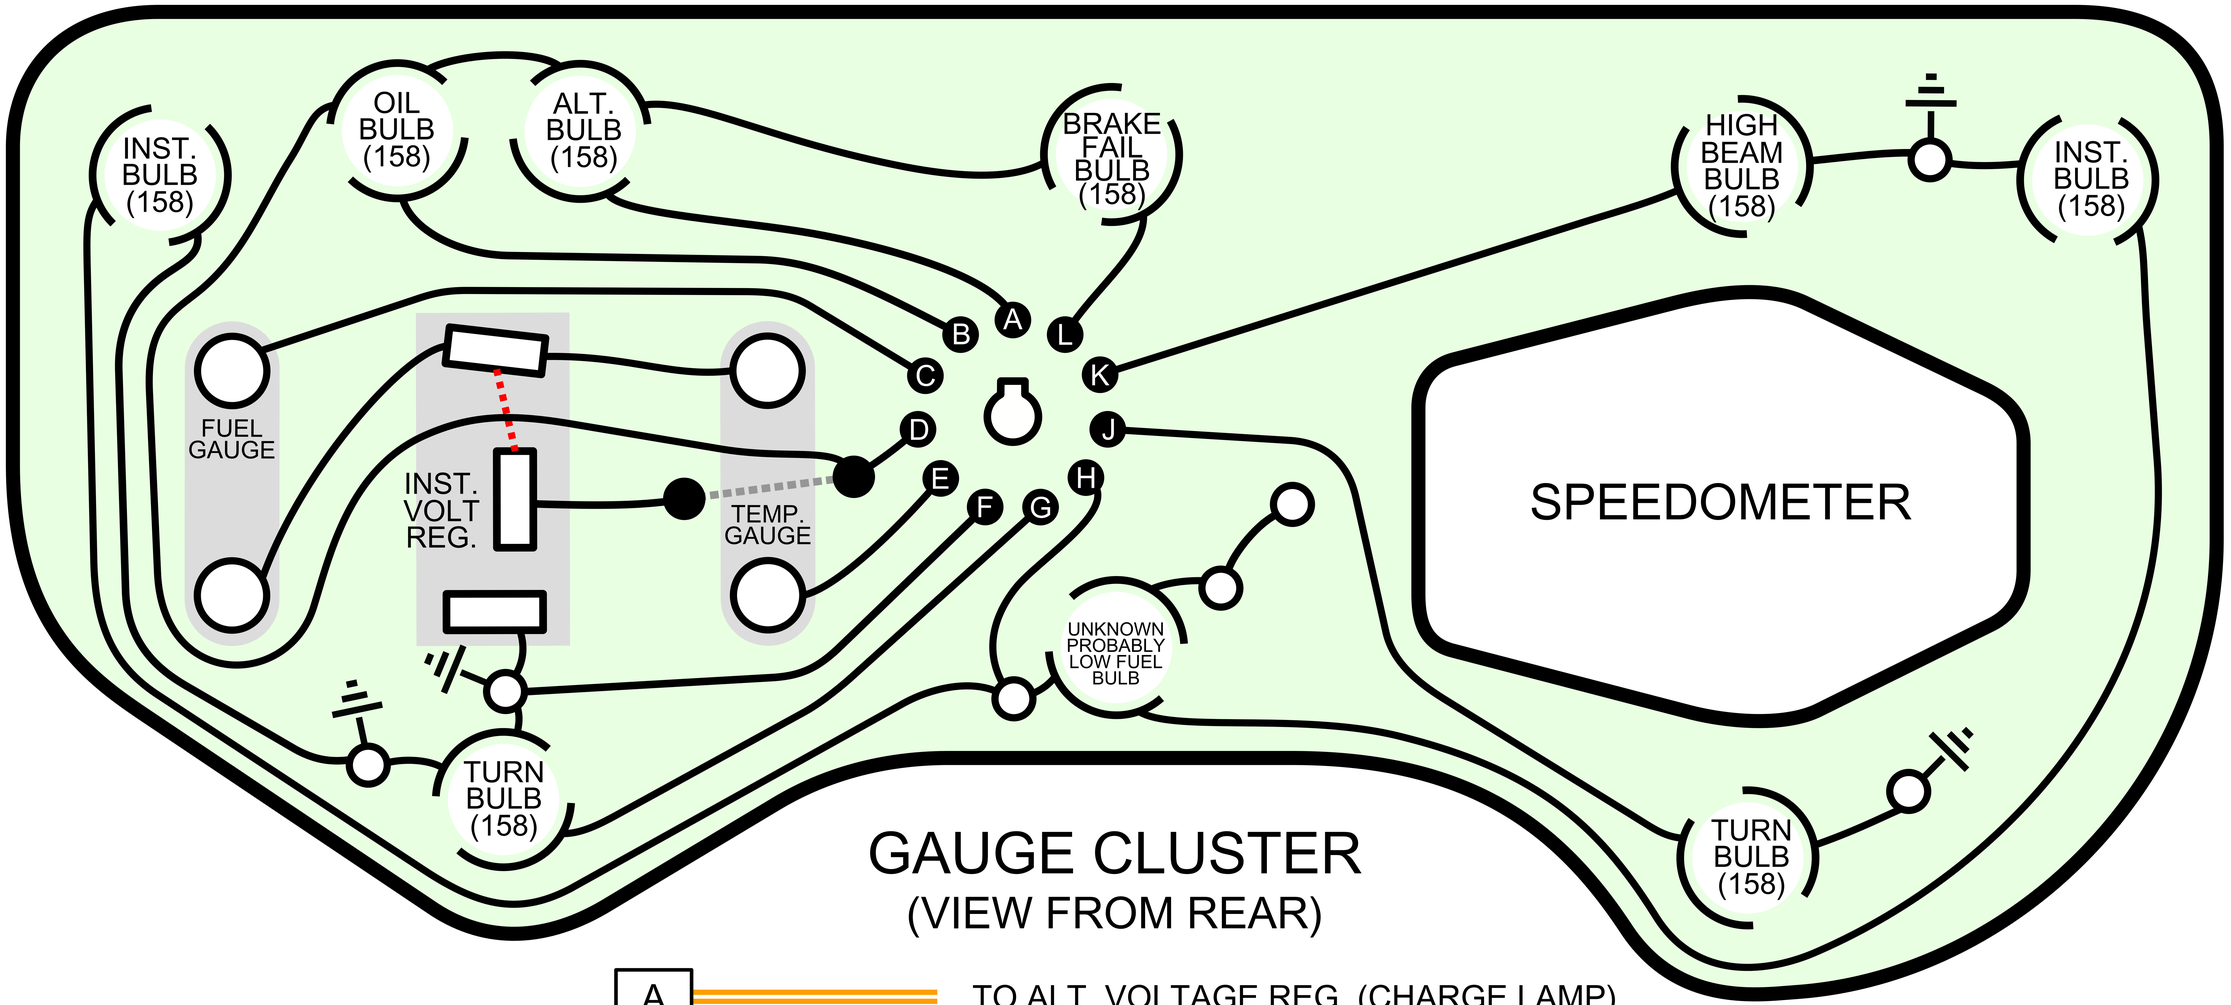

GAUGE CLUSTER
(VIEW FROM REAR)

A	TO ALT. VOLTAGE REG. (CHARGE LAMP)
B	TO OIL PRESS. SWITCH
C	TO FUEL SENDER
D	TO FUSEBOX (POWER FEED)
E	TO TEMP. SENDER
F	TO GROUND
G	TO TURN SIG. SWITCH (RIGHT)
H	TO HEADLIGHT SWITCH (INST. LIGHTS)
J	TO TURN SIG. SWITCH (LEFT)
K	TO DIMMER SWITCH (HIGH BEAM IND.)
L	TO BRAKE FAILURE SWITCH

CINCO